



Daviscomms Bravo 502

Quick Start Guide

TURNING PAGER ON

Press and hold  for 2 seconds.

TURNING PAGER OFF

1. Press  3 times until *PAGER OFF* displays, then press  and the pager will turn off.
2. Note that the screen will display the word *OFF* and the time.

FUNCTION MENU



The function menu provides access to many of your pager features through the use of symbols and prompts.

 (Read/Select) Selects displayed feature

 (Function) Navigates through the function menu

 +  (Read/Select + Function button combination) returns to the Status screen at any time

RECEIVING/READING MESSAGES

1. From the Status screen, press  to read your messages
2. Continue pressing  to scroll through your messages
 - If your pager receives a message that contains errors, the character with errors will blink
 - Messages that are not "protected" will be lost when the pager's memory is full. It is recommended that you delete unwanted messages frequently to avoid message loss. (See *Protecting/Unprotecting Messages*.)

If at any time you wish to quit from the message screen there are two methods for escaping:

1. Press both  +  simultaneously.
2. Wait for 15 seconds.

In both cases the display is returned to the Status screen.




DELETING A MESSAGE

1. To delete an unprotected message, press  two times while the message is displayed

To delete a protected message, you must first unprotect the message. (See *Protecting/Unprotecting Messages*)





2. Press  to confirm your decision

DELETING ALL MESSAGES

1. From the Status screen, press  2 times until "DELETE ALL" displays, and then press .
2. When "DELETE ALL?" displays, press  to confirm your decision

PROTECT/UNPROTECT MESSAGES

You can protect (save) up to 10 messages on the Br502. This prevents messages from being deleted or overwritten by new messages when the pager's memory is full.

1. To protect a message, press  while the message displays.
2. When "PROTECT" appears press  to confirm
1. To unprotect a protected message, press  button while the protected message displays
2. When "UNPROTECT" appears press  to unprotect the message

SETTING THE TIME

1. Press ● 5 times until *Set Time* displays
2. Press ● to select 12 or 24 hour time.
3. When the desired setting displays, press ■ to confirm and advance to the next field.
4. Repeat steps 1 and 2 to set the hour, minutes and AM/PM (if 12 hour time is chosen)
5. When time is set, press ■ to return to the Status screen

SETTING THE DATE

1. Press ● 6 times until *Set Date* displays
2. Press ● to advance the month.
3. When the desired month displays, press ■ to confirm and advance to the next field.
4. Repeat steps 1 and 2 to set the day and year
5. When time is set, press ■ to return to the Status screen

SETTING THE ALARM

1. From the Status screen, press ● 4 times until "*SET ALARM*" displays.
2. A flashing "*ON*" or "*OFF*" appears. Press ● to toggle ON or OFF.
3. Press ■ to confirm selection.

Note if you selected *OFF* the pager will return to the Status screen. If you selected *ON* proceed to next step.

4. Press the ■ button to select hr, then press the ● to set hr.
5. Repeat above steps to set min and A or P, if your pager is set to display 12 hr format.

6. When complete, press the  button

SETTING PRIVATE TIME



1. From the Status screen, press  10 times until "PRIVATE TIME" displays.


2. Press .



3. The display shows "PRIVATE TIME" with a flashing "ON" or "OFF". Press  to toggle ON or OFF.

4. Press  to activate your selection.

Note if you select *OFF* the pager will return to the Status screen. If you select *ON* proceed to the next step.

5. To set pager start time scroll through hrs by pressing the  button for each hr increment, then press the  button to set and advance to min. Repeat this step to set min and A or P, if your pager is set to display 12 hr time format.

6. Press the  button to set the *END* time by repeating the above steps.

7. When complete, press the  +  button to return to the status screen.

STATUS INDICATORS

 - New/Unread Message

 - Audio Alert

 - Silent Alert

 - Vibe Alert

 - Vibe-Chirp Alert

 - Alarm


 - Locked Message

 - Duplicate Message

 - Private Time

 - Battery Level

 - Low Battery (blinking icon)

 - Total Messages (Status Screen) & Message Number (Message Screen)

 - Continuous Message

 - Message Time Stamp