

UCC Ranger *Quick Start Guide*

TURNING YOUR PAGER ON

Press .


KEY DESCRIPTIONS

 Read/Replace

● Function

▲ Setting/Selection

RECEIVING/READING MESSAGES

1. Press  to display your message. If there is no message stored in the pager, "*NO PAGES*" will be displayed.

DELETING A MESSAGE / ALL MESSAGES

1. To delete a selected message, press ● 2 times when the unlocked message you want to delete is displayed.
2. "*DELETE*" will be displayed. Press ▲ to confirm deletion.
3. To delete all read and unlocked messages, press ● until "*CLEAR ALL?*" is displayed and press ▲ to confirm.

LOCKING AND UNLOCKING MESSAGES

1. Select the message you want to lock.
2. Press ● until "*PROTECT?*" is displayed.
3. Press ▲ to lock the message. The lock icon shows that the message has been locked.
4. To unlock, press ● then press ▲ to unlock while reading the message.

SETTING THE DATE

1. Press ● to display “*DATE?*”
2. Press ▲ enter date setting mode.
3. Press ▲ to move from one blinking position to another, (MM-DD-YY).
4. Press ● to adjust the digits.
5. Press ■ to confirm the setting.

SETTING THE TIME

1. Press ● to display “*TIME?*”
2. Press ▲ enter time setting mode.
3. Press ▲ to move from one blinking position to another, (HH-MM-A/P-12Hr/24Hr).
4. Press ● to adjust the digits.
5. Press ■ to confirm the setting.

SETTING THE ALARM

1. Press ● until “*SET ALARM?*” is displayed
2. Press ▲ to enter alarm setting mode.
3. Press ● to select from alarm 1, 2 or 3.
4. Press ▲] to confirm selection.
4. Press ● to select turning the alarm ON/OFF.
5. Press ▲ to move to the position in need of changing and press ● to adjust the alarm time.
6. Repeat above steps in every position to adjust the alarm time
7. Press ■ to confirm your alarm setting

Alarm icon in standby mode or OFF mode shows an alarm is ON. Alarm icon will not display when all alarm released.