

#### **TURNING PAGER ON**

Press and hold ■ for 2 seconds.

#### **TURNING PAGER OFF**

1. Press ▲ to display the PAGER OFF prompt then press ■ and the pager will turn off.

Note that the screen will display only the time and date.

#### **FUNCTION MENU**

The function menu provides access to many of your pager features through the use of symbols and prompts.

- ▲ Function Button
- Lamp Button
- Read Button

#### **RECEIVING/READING MESSAGES**

1. Press ■ to read your messages.
2. Continue pressing ■ to display the message arrival time.

#### **LOCK/UNLOCK MESSAGES**

1. Press ■ to scroll through the messages.
2. Press ▲ to display LOCK or UNLOCK
3. Press ■ to lock/unlock message

## **DELETING A MESSAGE**

1. To delete an unlocked message, select the message you want to delete, press ▲ until DELETE appears
2. Press ■ to delete the message

To delete a locked message you must first unlock the message.

## **DELETING ALL MESSAGES**

1. Press ▲ to scroll through the menu until DELETE ALL appears.
2. Press ■ to delete all read and unlocked messages

## **SETTING DATE AND TIME**

1. Press ▲ to scroll through the menu until DATE TIME appears.
2. Press ■ to change year\*
3. Press ▲ to move to the next field.
4. Complete hours, minute, and AM/PM in the same manner

## **SETTING VIBRATION/AUDIBLE ALERT**

1. Press ▲ to scroll through menu until SET ALERT appears
2. Press ■ until desired alert is selected
3. Press ▲ to select alert

\*The year value cannot be moved past 2015. Instead it will move from 2015 back to 2003. The year value is only used to handle leap year calculations for Feb 29th. In order to have the pager correctly display Feb 29th in leap years after 2015, simply set the year value to a previous leap year such as 2004, 2008 and 2012.









## SETTING THE ALARM

1. Press ▲ to scroll through menu until SET ALARM appears
2. Press ■ to access the alarm setting mode.
3. Press ■ to choose and set desired condition
4. Press ▲ to move to the minute field
6. Continue setting hour and AM/PM in same manner

## TURNING OFF THE ALARM

1. Press ▲ to scroll through menu until SET ALARM appears
2. Press ■ to display ALARM ON
3. Press ■ again to turn off the alarm

## STATUS INDICATORS

-  Alert (Beep) On
-  Alert (Melody) On
-  Alert (Vibrate) On
-  Alarm On
-  Message Lock
-  Duplicate Message
- new* New Unread Message
-  Change Battery
-  Message longer than 12 characters