

# QUICK START GUIDE



## SUN TELECOM T5

### TURNING PAGER ON

Press the button for 2 seconds to turn the pager on. A startup is momentarily displayed and the pager alerts the currently selected alert-mode (vibe, audio, silent).

### TURNING THE BACKLIGHT ON/OFF

To toggle the backlight, press and hold the button

### FUNCTION MENU

As you navigate through the Function Menu, the Function icon will change to indicate the current location of the cursor.

Press or to navigate through the Function Menu.

Press to enter the current function.

Press to exit the Function menu.

### TURNING PAGER OFF

Press the button to display the Function menu.

Press or to move the cursor to show TURN PAGER OFF

Press the button until Turn Pager Off? is displayed.

Press the button again to turn the pager off.

### RECEIVING/READING MESSAGES

Press or to move the cursor to the message you want to read.

Press to read the message.

### LOCKING AND UNLOCKING MESSAGES

Up to 10 messages can be locked to prevent them from being deleted or from being replaced when the memory is full.

Press or to select the message you want to lock or unlock.

Press then press or to move the cursor to show LOCK or UNLOCK.

Press to activate the setting.

### DELETING A MESSAGE/ALL MESSAGES

To delete a single message:

Press or to select the message you want to delete.

Press then press or to move the cursor to show DELETE.

Press to delete the message.

To delete all messages:

Press then press or to move the cursor to show DELETE ALL.

Press to delete all messages.

### MOVING A MESSAGE TO THE SAVED FOLDER

Press or to select the message you want to move.

Press then press or to move the cursor to show NOTEBOOK.

Press to move the message.

### SETTING DISPLAY ZOOM

From the Function menu:

Press or to move the cursor to show ZOOM.

Press to display the Zoom screen.

Press or to select the Zoom mode desired.

Press to activate the Zoom and exit to the Main Menu.

### SETTING THE TIME AND DATE

From the Function Menu:

Press or to move the cursor to show SET TIME.

Press to display the Set Time Screen.

Press to move the cursor to the next digit.

Press to adjust the current digit.

Repeat the two previous steps to adjust all time digits.

Press to activate and exit to the Main Menu.

### SETTING THE ALARM

From the Function Menu:

Press or to move the cursor to show SET ALARM.

Press to display the Set Alarm Screen.

Press to adjust the current digit or to select the Alarm mode (off/daily/time).

Repeat the two previous steps to adjust all time digits.

Press to activate and exit to the Main Menu.

### SETTING ALERT

From the Function Menu:

Press or to move the cursor to SET ALERT.

Press to display the Set Alert Screen.

Press or to move the cursor to the alert you want set.

Press to activate the alert setting and exit to the Main Menu.

### SETTING PRIVATE TIME

Private Time specifies a time period when the device receives messages without an audible or vibe alert.

From the Function Menu:

Press or to move the cursor to SET PRIVATE.

Press to display the Set Private Screen.

Press or to move the cursor.

Press to adjust the current digit or to enable/disable private time.

Repeat the two previous steps to adjust all time digits.

After setting the ON time, repeat the previous steps to set the OFF time.

Press to activate and exit to the Main Menu.

### SETTING DISPLAY LOCK (Feature only available with message encryption)

From the Function Menu:

Press or to move the cursor to display SET LOCK.

Press to display the Set Lock screen.

Press a four button sequence and remember it.














Press to activate the lock. (unlock state)

\* Display lock will activate after 5 minutes of pager inactivity. For immediate activation select LOCK NOW from the Function Menu.















\* Select SET UNLOCK from Function Menu and enter the current passcode to disable the display lock

## T5 SYMBOLS
















### INDICATORS

-  Audio Alert
-  Silent Alert (Vibration)
-  Enabled Alarm
-  Private Time Enabled
-  New Page or Unread Message Indication
-  Lock Message
-  Unlock Message
-  Full Battery Status
-  2/3 Battery Status
-  1/3 Battery Status
-  Low Battery Status
-  Message Continuation
-  Power On

### SYMBOLS (Message Status)

-  Inbox Folder
-  Info Folder
-  Saved Folder
-  Delete All
-  Delete
-  Message Full
-  Escape
-  Move to Notebook
-  Saved Slot
-  Unread Inbox Slot
-  Read Inbox Slot
-  Read Info Slot
-  Unread Info Slot
-  Cursor (Current Slot)

### SYMBOLS (Function Menu)

-  Escape
-  Set Time
-  Set Alarm
-  Set Alert
-  Set Info Alert
-  Set Audible ON
-  Set Audible OFF
-  Zoom
-  Pager Off
-  Disable Reminder
-  Enable Reminder
-  Set Private
-  Set Lock
-  Set Unlock
-  Lock Now