

 



Motorola T900



 



TURNING PAGER ON

- Open the flip and press any key to turn your pager on. The pager emits a 4-second power-up alert, and the Status screen displays.







 
TURNING PAGER OFF

- From the Main menu, press  or  to highlight *POWER OFF* and press .
- Highlight *YES* and press .




READING MESSAGES

- To read a message, (while previewing) press  or  to highlight the desired message and press .
- Press  or  to scroll through the text of a message or press  to page through the message.



 






COMPOSING AND SENDING A MESSAGE

- From the Send Message menu, press  or  to highlight *WRITE MESSAGE* and press .
- After you finish composing the message, press .
- To send, return to the Send Message menu, press  or  to highlight *SEND MESSAGE* and press .



 




 

DELETING A MESSAGE

- From the Main menu, press  or  to highlight the inbox containing the messages you want to delete and press .



 


 


SETTING THE DATE AND TIME






















- From the Main menu, press  or  to highlight *PREFERENCES* and press .
- Press  to highlight *SET TIME & DATE* and press .
- Press  or  to change the hour, minutes, and date. Press  or  to move between fields.

SETTING THE ALARM

- From the Main menu, press  or  to highlight *PREFERENCES* and press .
- Press  or  to move between fields and  or  to increase or decrease the value in each field.
- At any time, press  to save the changes and return to the Preferences menu. Or press  to exit without saving your changes.

PRIVATE TIME

- From the Main menu, press  or  to highlight *PREFERENCES* and press .
- Press  or  to highlight *PRIVATE TIME* and press .
- Press  or  to activate Private Time mode.

	MailBox Alert, News/Info Alert		Message Memory
	Alarm/Set Alarm		Back/Escape
	Set Time & Date		Yes/On
	Alert Volume/Key Click, Reminder Alert		No/Off
	Transmitter Off		News AutoPreview
+	Next/higher value		Set InBox History
-	Preceding/lower value		Next Message
	Previous item		CAPS (not locked)
	Next item		CAPS Lock on
	Move InBox Up		Alt (not locked)
	Move InBox Down		Alt Lock On
	Battery Gauge		

Note:

A flashing icon denotes unread messages or a function in process.

