Using Your **m**90[™]

Memos

Select in the Main Menu Select the Memos subfolder

View a Memo

Highlight the desired memo and press ENTER 1

Create a Memo

Press and select **New Memo**.

Enter a memo label in the Label field and memo text in the Text field.

When done, press when and select **Save**.

Edit a Memo

Highlight the memo to edit.

Press and select **Edit**.

After entering changes, press MENU and select Save.

Preferences

Select O-C in the Main Menu

Set the Mailbox Alert

Set Alerts to "Yes", set desired Volume, and select a mailbox (e.g. Inbox). Navigate from field to field. and press ENTER 1 to select desired options.

Press to save and exit.

Manually Overriding Your Inbox Alerts

You can quickly override your existing mailbox alert preferences from the Main Menu.

At any time, go to Main Menu by pressing and and enter and

Press and select Silence Alerts or Vibrate Alerts to turn the sound off.

To restore audible Inbox alerts, press and select *Alerts On*.

Set an Alarm

Select Alarm Clock and set the desired Volume.

Select Alarm #1 or Alarm #2 and set Alarm Clock to "On".

Navigate from field to field and press ENTER to select desired options.

Press sto save and exit.

....and More

For more more features and full instructions. see the M90 User's Guide in the accompanying CD-ROM.

Radio Frequency Exposure: The M90 meets all FCC and IC RF exposure quidelines when all Safety Information in Section 1 of the User's Guide is followed.

The Unication, M90 and Messenger logos, and M90 Messenger, are trademarks or registered trademarks of Unication Co., Ltd. © 2006 Unication Co., Ltd.

m90° Messenger

Quick Start Guide



Main Menu Icons

Status Icons















FOLDERS



ADDRESS BOOK



POWER OFF



POWER =



AUDIO ALERT

 


SIGNAL STRENGTH

Control and Navigation Keys



Exits from current menu





Displays a popup menu (if one is available).



- ENTER Selects highlighted item or next option (checkbox / option field).
 - In edit mode: use as "Enter" key (carriage return).



Deletes one character left of



- ▶ Press once before typing for single upper case character.
- ▶ Shift Lock: Press twice for all upper case, then press once more to return to lower case.



- Press once before typing a number or special character.
- ALT Lock: Press twice for continuous numbers or special characters, then press once more to release.
- then ENTER to return to main menu.
- then O SPACE to turn M90 on/off.




Navigation:

∧ or
✓ moves cursor up / down.

Getting Started

Battery Installation

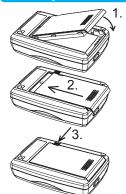

1. Insert the end of the battery with the gold electrical contacts into the M90 housing at an angle as shown, then swing down flush with the back of the M90.

The battery should insert easily if properly aligned! Do not use force!

- 2. Slide the battery into place so the end no longer protrudes from the the housing.
- 3. While holding the battery in place, slide the battery lock fully inwards to lock the battery in the housing.

Use only Unication Lithium Ion Polymer batteries intended for use with the M90.

Before First Use - Fully Charge the Battery



- 1. Connecting the battery charger:
 - ▶ Plug charger into a 120V AC power source.
 - ▶ Plug charger connector into rear of M90 as shown in illustration. IMPORTANT: The "\(\pi\)" symbol on the connector must face upwards.
 - Charging will begin and battery status icon will flash.
 - ▶ Charging is complete when icon stops flashing. NOTE: A full charge can take 4 - 5 hours.
- 2. Disconnecting the battery charger:
 - Unplug charger from the M90 by pulling straight out.

Set Date / Time and Owner Information

Select c—c in the Main Menu

Select **Owner Information** and type your name, phone number and any comments. When done, press to save changes and exit.

Select Date and Time.

Navigate from field to field and press ENTER® to select entries in each field.

When done, press to save changes and exit.

Using Your **490**°

Send a Message

Manual Entry

Select in the Main Menu

Enter and address in the To field, and a message in the Msg field.

When done, press when and select **Send**.

Adding a Contact from the Address Book Press and select **Select Address**.

Navigate to the desired contact and press [ENTER® to select it.

Press and select **Done Addressing**, then type your message in the **Msg** field.

When done, press and select **Send**.

Inbox Messages

Select in the Main Menu

Read a Message

Highlight a message and press ENTER to open the message for viewing.

Forward a Message

Highlight a message, press and select *Forward*.

Add a contact in the **To** field and send, (see "Adding a Contact from the Address Book").

Delete a Message

Highlight a message to delete, press and select **Delete**.

Reply to a Message

Highlight a message, press and select *Reply*.

Select an automatic reply message, or select **Compose** and type a reply message

then press and select **Send**.

News Messages

Select in the Main Menu

If you subscribe to a News Service, your News messages are stored in individual folders (such as Sports, Weather, etc.) within the News folder.

Address Book

Select in the Main Menu

Add a Contact or Group

Press and select New Contact or New Group.

Enter information such as name, PIN, email address, phone number, etc.

When done, press and select **Save**.

View a Contact or Group

Highlight a contact of group and press ENTER 10 to view details.

Edit a Contact or Group

Select a contact of group, press and select *Edit*. After entering changed, press and select **Save**.

