






 




## Pager Controls and Indicators

### Icons:

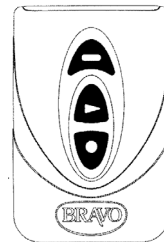 
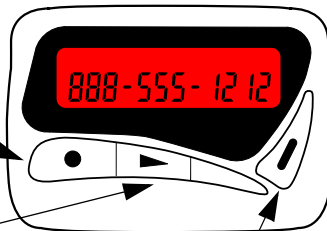 
-  Alarm is set
-  Vibrate mode
-  Musical alert
-  New message
-  Message is locked




-  Message continues
-  Out-Of-Range
-  Battery Low
-  Phone Book
-  Auto On/Off is active

**Function** - Press to move between features and change values.

**Select/Backlight** - Press to select features and turn backlight on or off.

**Read/Escape** - Press to read messages or return to the Status screen.



-  **Function:** Press to move between features and change values.
-  **Select/Backlight:** Press to select features and turn on/off the backlight.
-  **Read/Escape:** Press to read messages or return to the Status screen.

 
## Contents

<b>Introduction .....</b>	<b>1</b>	<b>Phone Book.....</b>	<b>10</b>
Pager Controls and Indicators .....	1	Adding Phone Numbers .....	10
<b>Getting Started .....</b>	<b>3</b>	Modifying Phone Numbers .....	11
Battery Information.....	3	Browsing Your Phone Book Entries ....	11
Installing/Replacing the Battery .....	3	Searching Your Phone Book Entries...	12
Turning Your Pager On.....	4	<b>QuickWords .....</b>	<b>12</b>
Turning Your Pager Off.....	4	<b>Setting the Auto On/Off Times .....</b>	<b>13</b>
Turning on the Backlight. ....	4	<b>Setting the Countdown Timer .....</b>	<b>13</b>
Pager Tips.....	4		
Personalizing Your Bravo 500 Pager.....	5		
<b>Time and Date.....</b>	<b>5</b>		
Setting the Time.....	5		
Setting the Date .....	6		
Setting the Alarm .....	6		
Displaying Date or Day of the Week ....	7		
<b>Setting the Message Alert .....</b>	<b>7</b>		
<b>Setting the Reminder Alert.....</b>	<b>7</b>		
<b>Messages .....</b>	<b>8</b>		
Reading Messages .....	8		
Locking/Unlocking Messages .....	8		
Storing Individual Messages.....	9		
Deleting Messages .....	9		



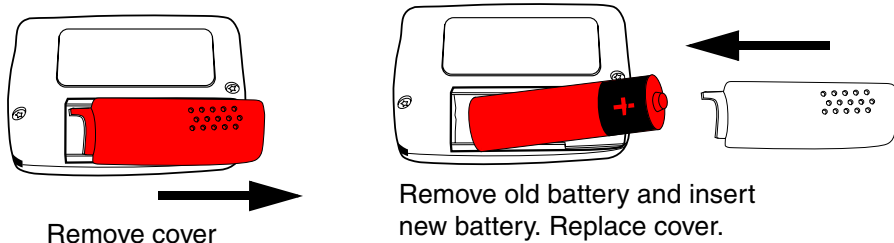 
## Getting Started

### Battery Information

Your pager uses one AAA-size alkaline battery (do not use carbon zinc batteries). If  is displayed, the battery is low. Replace the battery.

### Installing/Replacing the Battery

 
**Note:** You only have two minutes to replace the old battery with the new battery. Otherwise, you may lose all saved settings and pages.



**Caution!** You must match the (+) and (-) polarity markings. If you insert the battery backwards, your pager settings (time, date, etc.) will be erased.



## Turning Your Pager On

Press	To Display	Description
—	Status Screen 	The Status screen displays the date and time and other status indicators.

## Turning Your Pager Off

Press	To Display	Then Press
●	PAGER OFF	▶

## Turning on the Backlight.

Press	To Display	Then Press
▶ and hold	Backlight	Automatically turns off.

## Pager Tips

1. After 8 seconds of inactivity, the pager returns to the Status screen without saving the changes.
2. Press and hold ● to speed up the scrolling of the character being changed.



## Personalizing Your Bravo 500 Pager

Press	To Display	Then Press
●	<i>POWER UP SCR</i>	▶ to display Power Up
● to set character	<i>A to 9</i>	▶ to go to next character
Repeat	Up to 20 characters	■ to save Power Up

## Time and Date

### Setting the Time

Your pager can be set to a 24-hour format when you buy it, or you can have your Service Center or service provider change it to a 24-hour format.

Press	To Display	Then Press
●	<i>SET TIME</i>	▶ to display the time
● to set the hour	<i>11 to 121</i>	▶ to go to next field
● to set minutes	<i>101 to 100</i>	▶ to go to next field
● for a.m. or p.m.	<i>A or P</i>	■ to save



## Setting the Date

Press	To Display	Then Press
●	SET DATE	▶ to display the date
● to set month	JAN to DEC	▶ to go to next field
● to set day	01 to 31	▶ to go to next field
● to set year.	01	■ to save

**Note:** When you change the date, the day of the week is automatically updated.

## Setting the Alarm

Press	To Display	Then Press
●	SET ALARM	▶ to display alarm status
●	ALARM 1, 2, or 3	▶ to select an alarm
● for alarm type	OFF, DLY, SCH, or MNL	▶ to select alarm type
● and ▶	alarm time [plus month/day if SCH]	▶ to advance to alarm prompt message
● to set character	A to 9	▶ to go to next character
Repeat	up to 20 characters	■ to save



## Displaying Date or Day of the Week

Press	To Display	Then Press
▶ to switch between date & day of the week	JAN 01 12:00 IP or MON 12:00 IP	

## Setting the Message Alert

Press	To Display	Then Press
●	SET ALERT	▶ to display alert type
●	VIBRATE, AUDIBLE, NO ALERT	▶ to select alert type
● if AUDIBLE	ALERT 1 to ALERT 12	▶ to select alert tone

## Setting the Reminder Alert

Press	To Display	Then Press
●	SET REMINDER	▶ to activate
●	REM ON	▶ to display setting
●	01 to 60 (minutes)	■ to save



## Messages

Your pager can store up to 20 personal messages and 5 maildrop messages.

### Reading Messages

Press	To Display	Description
—	2 PAGES	Number of messages
—	123-4567	First Numerical message
—	CO 13-A	Number in brackets and address (usually A).
●	next message	

### Locking/Unlocking Messages

You can lock up to ten messages to protect them.

**Note:** You cannot lock maildrop messages.

Press	To Display	Then Press
● with unlocked message displayed	LOCK	▶ to lock the message
● with locked message displayed	UNLOCK	▶ to unlock the message





## Storing Individual Messages

Press	To Display	Then Press
●	SAVE DIR	▶ to display NAME prompt
● to set character	A to Z	▶ to go to next character
— to save name	1d MELODY	● to select music alert
		— to save

## Deleting Messages

**Note:** Messages must be unlocked before they can be deleted.

### *Deleting a Maildrop Message*

Press	To Display	Then Press
● with maildrop message displayed	DELETE MAIL	▶ to delete maildrop message

### *Deleting an Individual Message*

Press	To Display	Then Press
●	DELETE MSG	▶ to delete message



## Deleting All Messages

Press	To Display	Then Press
● with Status screen displayed	<i>DELETE ALL</i>	▶ to delete all unlocked messages

## Phone Book

You may store telephone numbers for up to 12 people and assign one of the 9 alert tones to each entry.

### Adding Phone Numbers

Press	To Display	Then Press
●	<i>TEL DIR</i>	▶ to display phone book
●	<i>Add DIR</i>	▶ to display <i>NAME</i> prompt
● and ▶	Full Name	● to save & display <i>TEL -</i>
● and ▶	Phone Number	● to save & display <i>1d MELODY</i>
●	<i>123456789</i>	● to hear alert <i>!</i>
Repeat	Desired alert	▶ to assign alert and exit



## Modifying Phone Numbers

Press	To Display	Then Press
●	<i>TEL DIR</i>	▶ to display phone book
●	<i>MODIFY DIR</i>	▶ to display first entry
●	Desired phone book entry	▶ to edit
● and ▶	Correct Name	■ to save & display <i>TEL -</i>
● and ▶	Correct Phone Number	■ to save & display <i>1d MELODY</i>
▶	<i>123456789</i>	● to select music alert
▶	to save changes	

## Browsing Your Phone Book Entries

Press	To Display	Then Press
●	<i>TEL DIR</i>	▶ to display phone book
●	<i>BROWSE</i>	▶ to display first entry
●	Each phone book entry	▶ to view entry



## Searching Your Phone Book Entries

Press	To Display	Then Press
●	<i>TEL DIR</i>	▶ to display phone book
●	<i>SEARCH</i>	▶ to activate search
● and ▶	First Few Characters	▬ to jump to matching entry

**Note:** If there are no phone book entries that match the search characters, the message *NO SUCH NAME* is displayed.

## QuickWords

QuickWords are short text messages that can be displayed when you are paged (see table below for code; asterisk plus number).

QuickWord Code	Message	QuickWord Code	Message
*0	RUNNING LATE	*5	CALL HOME
*1	ON MY WAY	*6	WHERE ARE U
*2	PICK ME UP	*7	MEET YOU AT
*3	I AM HOME	*8	I LOVE YOU
*4	COME HOME	*9	HAPPY B-DAY



## Setting the Auto On/Off Times

You can set your pager to turn OFF at one time and come back ON at a later time.

Press	To Display	Then Press
●	SET AUTO	▶ to activate
●	AUTO ON	▶ to display OFF time
● and ▶	Auto Off time	▶ to go to Auto On
● and ▶	Auto On time	■ to save

## Setting the Countdown Timer

Press	To Display	Then Press
●	DOWN TIMER	▶ to display choices
●	ON	▶ to select Timer ON
● and ▶	To set the time in hours, minutes, and seconds	■ to save

**Note:** To display the countdown timer instead of the Status screen, press and hold ■ for 2 seconds. Press ■ to return to the Status screen.