

USER'S MANUAL

T3 Plus

Alphanumeric Pager



VER 3.4

T3Plus

Thank you for purchasing the T3Plus Pager. Through its advanced paging technology, the T3Plus will keep you connected to your important messages-anytime, anyplace.

Please read this manual carefully before using your pager so you can use its functions and capabilities to their fullest.

CONTENTS

▶ FEATURES	5
▶ DESCRIPTION OF INDICATORS & SYMBOLS	8
▶ CONTROL BUTTONS	1 1
▶ OPERATION	
• Turning the Backlight On/Off	1 2
• Turning the Pager On	1 3
• Turning the Pager Off	1 4
• Main Screen	1 5
• Function Menu Screen	1 6
• Inbox Folder Screen	1 7
• Info Folder Screen	1 8
• Saved Folder Screen	1 8
▶ FUNCTION MENU	
• Reading Messages in each Folder	1 9
• Setting the Time and Date	2 0
• Setting Alarm	2 1
• Setting Private Time	2 2
• Setting Message Alert	2 3
• Setting Audible ON/OFF	2 4

CONTENTS

- Enabling the Display Zoom 25
- Enabling the Reminder Alert 26
- Locking and Unlocking Messages 27
- Deleting A Message 28
- Deleting All Messages 28
- Moving A Message to the Saved Folder 29
- Setting the Info Slot Alert Type 30

FEATURES

- ▶ 16 Flex addresses
- ▶ 4 Line x 20 Alpha Character Display
- ▶ Up to 20 Inbox Messages
- ▶ 15 Info Message Slots
- ▶ Up to 16 Saved Messages
- ▶ Inbox Message Storage: 6400 Characters
- ▶ Info Message Storage: 19200 Characters
- ▶ Saved Message Storage: 3200 Characters
- ▶ Inbox Maximum Message Length: 2000 Characters
- ▶ Info Maximum Message Length: 2000 Characters
- ▶ Up to 10 Inbox Messages can be Locked to Prevent Deletion
- ▶ Info History of up to 7 messages

FEATURES

- ▶ Zoom On/Off (User Selectable)
- ▶ Battery Status Display
- ▶ One Time or Daily Alarm (User Selectable)
- ▶ Message with Time & Date Stamp
- ▶ Automatic Alert Reset
- ▶ Multiple Alert , Chirp , Vibe and Silent Options
- ▶ Reminder Alert for Unread Messages (User Selectable)
- ▶ Menu Option to Turn Device ON/OFF
- ▶ New Message Indication (Flashing Icon)

FEATURES

- ▶ Unread Message Indication
- ▶ Continuous Message Indication (with Icon)
- ▶ Erred Character Indication
- ▶ All or Individual Message Delete
- ▶ Memory Full Indication (with Icon)
- ▶ Message Slot Number
- ▶ Duplicate Message Indication (with Icon)
- ▶ EL Backlit Display
- ▶ Out of Service Range Indication (Optional)
- ▶ Message Retention During Battery Replacement
- ▶ 1 AAA Battery
- ▶ Private Time

DESCRIPTION OF INDICATORS & SYMBOLS

Indicators



Audio Alert



Vibe Alert



Enabled Alarm



Enabled Private Time



New Page or Unread Message Indication



Lock Message



Unlock Message



In Range or Out Range Indication



Full Battery Status



2/3 Battery Status



1/3 Battery Status



Low Battery Status



Message Continuation



Power On

DESCRIPTION OF INDICATORS & SYMBOLS

Symbols



Inbox Folder



Info Folder



Saved Folder



Escape



Set Time



Set Alarm



Set Alert



Pager Off



Set Private



Zoom



Enable Reminder



Disable Reminder



Delete All



Delete



Escape



Move to Saved Folder

DESCRIPTION OF INDICATORS & SYMBOLS

Symbols



Info Slot (Enabled Alert)



Unread Info Slot (Enabled Alert)



Set Info Slot Alert



Enable Private Time



Disable Private Time



Saved Message



Unread Inbox Message



Read Inbox Message



Read Info Slot



Unread Info Slot



Message Cursor



Set Audible ON



Set Audible OFF

CONTROL BUTTONS



- Use to navigate through the Function menu and through your messages
- Use to navigate through time, alarm, and date setting functions




- Use to enter the Function menu mode
- Use to turn Backlight on and off
- Use to exit to current Function mode



- Use to turn the pager on and off
- Use to read the received message
- Use to activate your selection
- Use to adjust the time, alarm, and date setting functions

Turning the Backlight ON OFF

The Backlight allows viewing of messages in low light conditions.

- To turn the Backlight On, press and hold  for 2 seconds
- The Backlight will automatically turn off after 10 seconds of no buttons being pressed
- To immediately turn the Backlight Off, press and hold  for 2 seconds

Turning the Pager On



PowerUp Screen

Press the Read button for two (2) seconds to turn the pager on. A start-up screen is momentarily displayed and the pager alerts the currently selected alert-mode (Vibe, Audio, Silent).



Main Screen








Standby Screen

 
Turning the Pager Off




Off Screen

- Press the  button to display the Function menu
- Press the  or  button to move the cursor on OFF icon
- Press the  button
- *"TURN PAGER OFF?"* is displayed
- press the  button again to turn the pager off


The pager is now off and the screen should be blank.

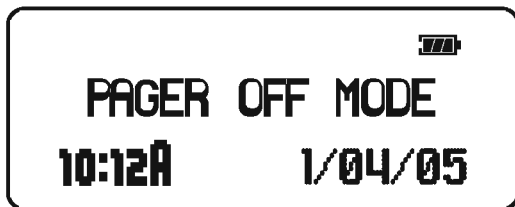

Time/Date display in Pager Off mode

Note: If you choose the function key () while the pager is off, the pager will display Pager Off Mode and the time and date. The display disappears after eight (8) seconds or after you press any of the pager keys.

 Main Screen

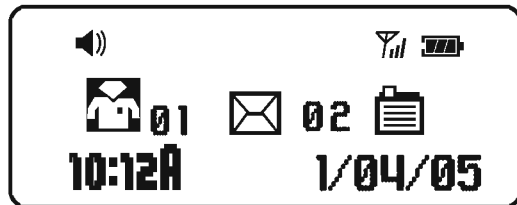

Main Screen

Pressing any of the buttons on the Standby Screen will provide access to the Main Screen.

The Main Screen shows both the current status of message folders (Inbox/Info/Saved) and the time and date.

The Main Screen also displays any activated pager settings in the split screen.

When the Main Screen is initially displayed, the Inbox Folder icon is the first icon followed by the Info and Saved icons.

The Inbox Folder is also highlighted. Choosing either arrow button will highlight the other icons.

- Press  or  to move the cursor between Main Screen Folders
- Press  to enter the selected Folder





Function Menu Screen

The Function Menu provides access to the many features incorporated in the T3Plus.



 
Function Menu Screen

As you navigate through the Function menu, the Function icon will change to indicate the current location of the cursor.

- Press  or  to navigate through the Function menu
- Press  to enter the current function
- Press  to exit the Function menu


Note: Depending on the pager and whether it has messages, some icons may not display on the pager.

Inbox Folder

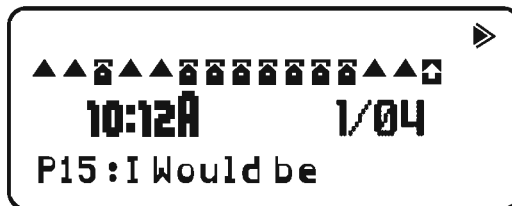

Inbox Folder Screen

The Inbox Folder Screen shows the current status of personal messages. In addition, the first line of your message is displayed as a message preview.

Note: The status of an unread message will not change by previewing the message. You must select the Read button () to open and view the message. Only after the message has been opened will it be marked as "read" on your pager.

Info Folder Screen



Info Folder Screen

The Info Folder Screen shows the current status of your Info messages. In addition, the first line of your message is displayed as a message preview.




Saved Folder Screen



Saved Folder Screen

The Saved Folder Screen shows the current status of the saved messages. In addition, the first line of your message is displayed as a message preview.

Reading Messages in each Folder

- Press  or  to move the cursor to the message you want to read
- Press  button to read the message

Scrolling Screen by Screen

- Press and hold  button

Reading Previous or Next Message

- When reading a message, Press  or  button to read the Previous or Next message

Note: If the reminder alert is enabled, the pager will give a periodic alert until all unread messages are read. A flashing © symbol on the StandBy screen indicates that there are unread messages on your pager.







FUNCTION MENU

Setting the Time and Date

10:12A 1/04/05

Set Time Screen

To set the Time and Date, perform the following steps.
From the Function Menu:

- Press  or  to move the cursor to display "**SET TIME**"
- Press  to display the Set Time Screen
- Press  to move the cursor to the next digit
- Press  to adjust the current digit
- Repeat the two previous steps to adjust all time digits
- Press  to activate the current setting and exit to the Main Screen

FUNCTION MENU

Setting Alarm

DAILY 12:00A

 
Set Alarm Screen

From the Function menu, press ◀ or ▶ to move the cursor to display " *SET ALARM* ".

- Press ⬆ to display the Set Alarm screen
- Press ◀ or ▶ to move the cursor
- Press ⬆ to adjust the current digit or to select the Alarm mode(Off/Daily/1Time)
- Repeat the two previous steps to adjust all the time digits
- Press ⬇ button to activate the current setting and exit to the Main Screen





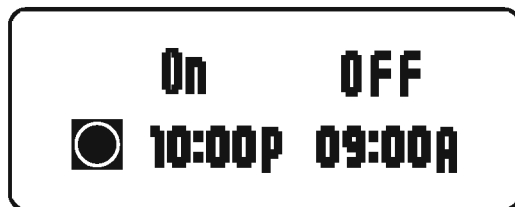


FUNCTION MENU

Setting Private Time



-  : Enable Icon
 : Disable Icon

Private Time allows you to specify a time period during which the device receives message without our an audible or vibe alert. To Set Private Time, perform the following steps. From the Function Menu:

- Press  or  to move the cursor to display "**SET PRIVATE**"
- Press  to display the Set Private screen
- Press  or  to move the cursor
- Press  to adjust the current digit or to enable/ disable private time
- Repeat the two previous steps to adjust all the time digits
- After setting the ON time, repeat the previous steps to set the OFF time
- Press  button to activate the current setting and exit to the Main Screen

FUNCTION MENU

Setting Message Alert









Set Message Alert Screen

You can set the following message alerts:

- Audible
- Vibe
- Chirp
- Vibe & Chirp
- Silent

In addition, you may select from 8 other alerts. To change the Message Alert, perform the following steps.

From the Function Menu:

- Press  or  to move the cursor to display "**SET ALERT**"
- Press  to display the Set Alert screen
- Press  or  to move the cursor to the alert you want to set
- Press  to activate the alert setting and exit to the Main Screen




Note: You may also press  to exit to the Main Screen without changing the Message Alert.

Setting Audible ON/OFF

The alert can be set as either audible ON or OFF.

To change the Audible Mode, perform the following steps,

From the Function menu:

- Press  or  to move the cursor to display "*SET AUDIBLE ON/OFF*"
- Press  to toggle the Audible Setting

If the Audible On function is set (), the pager will alert.

If the Audible Off function is set (), the pager will be on vibrate mode. Audible Mode applies to all alerts, including reminder alert, alarm, etc.

Note: If the Alert has been set for silent, setting the Audible ON/OFF Function will not be activated.

FUNCTION MENU







Setting Display Zoom



Enable Zoom Screen




When this feature is enabled, the standard 4-line Display is converted to a 2-line Display. The characters are enlarged to increase message readability. To Set the Display Zoom, perform the following steps.

From the Function Menu:

- Press  or  to move the cursor to display "**ZOOM**"
- Press  to display the Zoom screen
- Press  or  to select the Zoom mode desired
- Press  to activate the Zoom and exit to the Main Screen

Enabling Reminder Alert







When this feature is enabled and there are unread personal messages, the pager will alert the user with the current selected personal alert. The pager does not emit reminder alerts for Info Messages, or messages with no alert setting. To change the Reminder Alert Setting, perform the following steps. From the Function menu:

- Press  or  to move the cursor to display "**ENABLE/DISABLE REMINDER**"
- Press  to toggle the current setting and exit to the Main Screen

Locking and Unlocking Messages

Up to 10 messages can be locked to prevent them from being deleted or from being replaced when the memory is full. To Lock or Unlock a message, perform the following steps.

From the Inbox Folder Status Screen:

- Press  or  to select the message you want to lock or unlock
- Press  and then press  or  to move the cursor to show "**LOCK**" or "**UNLOCK**"
- Press  to activate the setting







To lock or unlock a message while reading it, follow the last two steps above while the message is displayed.

Note: Info and Saved Messages cannot be locked.

Deleting A Message

To delete a single message perform the following steps.





From the Inbox/Info/Saved Folder Status Screen:

- Press  or  to select the message you want to delete
- Press  and then press  or  to move the cursor to show **"DELETE"**
- Press  to delete the message

Deleting All Messages

To Delete all messages, perform the following steps.







From the Inbox/Info/Saved Folder Status Screen:

- Press  and then press  or  to move the cursor to show **"DELETE ALL"**
- Press  to delete all messages

Note: Unread personal messages and Locked messages cannot be deleted by using the Delete All function. Using Delete All with the Info Folder, will only delete those messages in the current selected slot.

Moving A Message to the Saved Folder

To move a message to the Saved Folder, perform the following steps.
From the Inbox/Info Folder Screen:

- Press  or  to select the message you want to move
- Press  and then press  or  to move the cursor to show **"NOTEBOOK"**
- Press  to move the message










To Move a message while reading it, follow the last two steps above while the message is displayed.

Note: The term **"NOTEBOOK"** refers to the Saved Folder.

FUNCTION MENU

Setting the Info Slot Message Alert Type

To set the Info Slot Alert, perform the following steps.
From the Info Folder Status Screen:

- Press  or  to select the Info Slot you want to set the alert for
- Press  and then press  or  to move the cursor to show "*SET ALERT*"
- Press  and then press  or  to move the cursor to the desired alert type
- Press  to activate the alert setting

While reading a message, follow the last three steps.

Note: When Inbox Message alert is set to Silent, all alerts revert to Silent regardless of the current Info Slot alert type.



MEMO

SUN TELECOM
INTERNATIONAL

LIMITATION OF LIABILITY:

Neither your Wireless Provider nor Sun Telecom International is responsible for data that may be damaged or lost at any time, including, without limitation data lost or damaged during the servicing of Sun Telecom International hardware. In as much as the wireless data service provided, we cannot guarantee or warrant that the wireless data service will always be available or will always function properly. For this and other reasons, the wireless data service should not be relied upon for the transmission of data relating to emergency or life-threatening or mission critical situations, and Sun Telecom International disclaims any liability on its behalf and on behalf of its Wireless Providers for events or damages resulting from such reliance or the failure of the wireless data service to perform or to be available for your use of the wireless data service, including, without limitation, the lack of service coverage in the area in which YOU wish to use the wireless solution. To the extent the third party providing the wireless data service provides any warranties or guarantees that may be passed on to YOU, such warranties and/or guarantees are automatically passed on to YOU without any further effort on your part or on the part of Sun Telecom International. Neither Sun Telecom International nor your wireless provider shall in any way be liable to you for any damages you suffer or incur (including, but not limited to, general, special, consequential or incidental damages including damages for loss of business profits, business interruption, loss of business information and the like and personal injury or wrongful death damages) arising from or in connection with the use or performance of our product, even if Sun Telecom International or your wireless solution provider are aware of the possibility of such damages. This limitation is intended to apply and does apply without regard to whether such damages are claimed, asserted or brought in an action or claim sounding in tort or contract or on the warranty, or under any other law or form of action.

INFORMATION TO USER:

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- ❑ Reorient/Relocate the receiving antenna.
- ❑ Increase the separation between the equipment and receiver.
- ❑ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ❑ Consult the dealer or an experienced radio/TV technician for help.

FCC COMPLIANCE STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution : Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate this equipment.

The party responsible for product compliance

