

USER'S MANUAL

[T 5]



Alphanumeric Pager



CONTENTS














FEATURES	3
DESCRIPTION OF INDICATORS & SYMBOLS	4
CONTROL BUTTONS	7
OPERATION	
Turning The Pager On / Off	8
Main Screen	9
Function Menu Screen	10
Inbox Message Screen	10
Info Message Screen	11
Saved Message Screen	11
FUNCTION MENU	
Reading a Stored Message in each Message Screen	12
Setting the Time and Date	13
Setting the Alarm	14
Setting the Paging Alert	15
Setting the Audible On / Off	16
Enabling the Display Zoom	17
Enabling the Reminder Alert	17
Locking and Unlocking Messages	18
Deleting Message	19
Moving a Message to the Saved Folder	20
Selecting an Info Alert Type	20
Display Lock	21
Lock Enable	21
Changing the password	22
Disabling the password	23

FEATURES

- Encrypted Message (AES-128) Support
- 16 Flex addresses
- 4 Line x 20 Alpha Character Display
- 20 Inbox Message Slots
- 15 Info Message Slots
- 16 Saved Message Slots
- Inbox Message Storage: 6400 Bytes
- Info Message Storage: 19200 Bytes
- Saved Message Storage: 3200 Bytes
- Inbox Max. Message Length: 1000 Bytes
- Info Max. Message Length: 1000 Bytes
- 10 Inbox Messages Lock with Lock Icon
- 7 Sub-slots of each Info Slot (optional)
- Zoom On / Off (User Selectable)
- Battery Status Display
- One Alarm with Message ("ALARM TIME")
- Message with Time & Date Stamping
- Automatic Alert Reset
- 1 Beep, 7 Different pleasing Alerts, a Chirp, Vibrate, Sleep
- User-Selectable Reminder Alert
- Audible ON / OFF
- Manual ON / OFF using Softkey
- No Message Indication (No Message)
- New Message indication (Flashing Icon)
- Unread Message Indication
- Continuous Message Indication (with Icon)
- Error Message Indication (with Icon)
- All & Selective Message Delete
- Message Full Indication (with Icon)
- Message Slot Number
- Duplicated Message Indication (with Icon)
- EL Backlight Display
- Smart Unread Reminder On / Off (Optional)
- Lock Display

DESCRIPTION OF INDICATORS & SYMBOLS

Indicators

 Audio Alert	 Full Battery Status
 Silent Alert (Vibration)	 2/3 Battery Status
 Enabled Alarm	 1/3 Battery Status
 Private Time Enabled	 Low Battery Status
 New Page or Unread Message Indication	 Message Continuation
 Lock Message	 Power On
 Unlock Message	

Note: When the battery is low the pager will alert with a short chirp at the top of every hour.

DESCRIPTION OF INDICATORS & SYMBOLS

Symbols (Message Status)



Inbox Folder



Info Folder



Saved Folder



Delete All



Delete



Message Full



Escape



Move to Notebook



Saved Slot



Unread Inbox Slot



Read Inbox Slot



Read Info Slot



Unread Info Slot



Cursor (Current Slot)

DESCRIPTION OF INDICATORS & SYMBOLS

Symbols (Function Menu)



Escape



Set Time



Set Alarm



Set Alert



Set Info Alert



Set Audible ON



Set Audible OFF



Zoom



Pager Off



Disable Reminder



Enable Reminder



Set Private



Set Lock



Set Unlock



Lock Now

CONTROL BUTTONS



- Use to navigate through the Function menu and through your messages.
- Use to navigate through time, alarm, and date setting function



 
- Use to enter the Function menu mode.
- Use to turn the Backlight off.
- Use to exit to current Function mode.




- Use to turn the pager on and off.
- Use to read the received message.
- Use to activate your selection.
- Use to adjust the time, alarm, and date setting functions.

OPERATION


Turning the Pager On

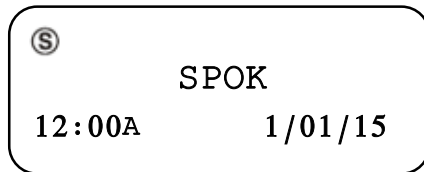






PowerUp Screen

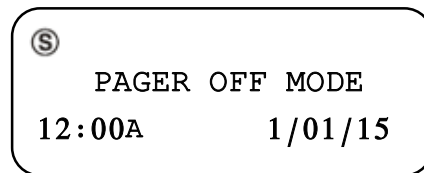 
Press  for two (2) seconds to turn the pager on. A start-up screen is momentarily displayed and the pager alerts the currently selected alert-mode. (Vibrator, Audio, Sleep)

Turning the Pager Off



 
Time/Date display on Pager Off

Press  button to display the Function menu.
Press  or  button to move the cursor on OFF icon.
Press  button.
"TURN PAGER OFF?" is displayed.
Press  button again to turn the pager off.

Note: If you choose the function key  while the pager is off, the pager will display Pager Off Mode and the time and date. The display disappears after eight (8) seconds or after you press any of the pager keys.

OPERATION

Main Screen

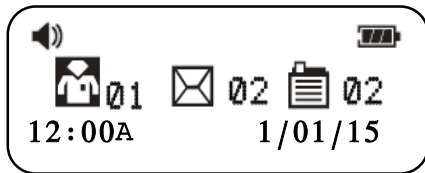

Main Screen

Pressing any of the buttons on the Standby Screen will provide access to the Main Screen.

The Main Screen shows both the current status of message folders (Inbox / Info / Saved) and the time and date. The Main Screen also displays any activated pager settings in the split screen.

When the Main Screen is initially displayed, the Inbox Folder icon is the first icon followed by the Info and Saved icons. The Inbox folder is also highlighted. Choosing either arrow button will highlight the other icons.

Press  or  to move the cursor within the Message Folder. Press  to enter the selected Folder.

OPERATION

Function Menu Screen

The Function Menu provides access to the many features incorporated in the **T5**.



Function Menu Screen

 
As you navigate through the Function menu, the Function icon will reverse to indicate the current location of the cursor.

Press  or  to navigate through the Function menu.

Press  to enter the current menu.

Press  to exit the Function menu.

Inbox Message Screen

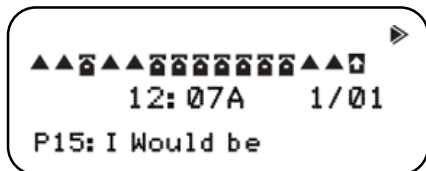


Inbox Message Screen

The Inbox Message Screen shows the current status of Inbox messages by displaying the first line of your message. (Message Preview)

OPERATION

 
Info Message Screen

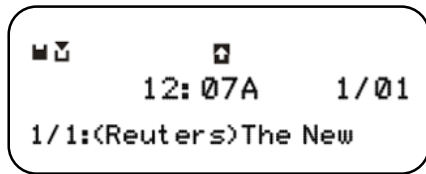

Info Message Screen

The Info Message Screen shows the current status of Info messages by displaying the first line of your message. (Message Preview)

 Saved Message Screen

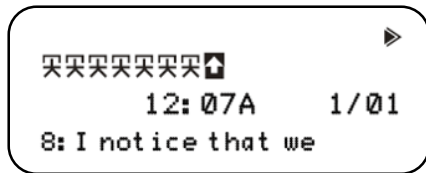

Saved Message Screen

The Saved Message Screen shows the current status of the messages by displaying the first line of your message. (Message Preview)

FUNCTION MENU

Reading Stored Message in each Message Screen


From each Message screen press  or  to move the cursor to the message you want to read. Press  button to read the message.

Auto Scrolling Screen by Screen

Press and hold  button.

 
Reading Previous or Next Message

Press  or  button.



Note: When an unread message exists, the pager gives a periodic reminder alert until all unread messages are read. A flashing  symbol on the StandBy screen indicates that there are unread messages on your pager.

FUNCTION MENU

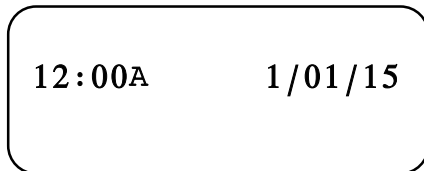Setting the Time and Date



Set Time Screen

From the Function menu, press  or  to move the cursor to display "**SET TIME**".

Press  to display the Set Time screen.

 
Press  to move the cursor to the next digit.

Press  to adjust the current digit.

Repeat the two previous steps to adjust all time digits.

Press  to activate the time and date setting.

Setting the Alarm

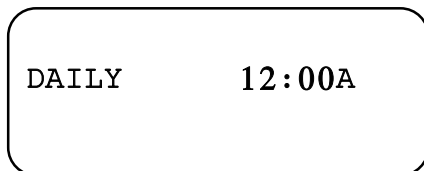



Set Alarm Screen

From the Function menu, press  or  to move the cursor to display "**SET ALARM**".

Press  to display the Set Alarm screen.

Press  again to select Daily or 1Time alarm

Press  or  to move the cursor to the time digits

Press  to adjust the current digit.

Repeat the two previous steps to adjust all the time digits.

Press  button to activate the current setting.

FUNCTION MENU

Setting the Paging Alert



Set Alert Screen

You can set the paging alert to an audible alert, a vibrating alert, a chirp alert, a sleep alert (completely silent), or one of seven other alerts. From the Function menu:

Press or to move the cursor to display **"SET ALERT"**.

Press to display the Set-Alert screen.

Press or to move the cursor to the alert you want to set.

Press to activate the alert setting.

Note: If no changes have been made, please wait for at least five (5) seconds before exiting the screen. You may also choose to exit from any screen.


Alert #7 is continuous so you must press a button to silence it when a message is received.



FUNCTION MENU

Setting the Audible On/Off

The alert can be set as either audible on or off.


Press  to display the function menu.

Press  to move the cursor to  or .

The  symbol is displayed if the pager is in the audible off mode (prompting you to enter the audible on mode, if desired). The  symbol is displayed if the pager is in the audible on mode (prompting you to enter the audible off mode, if desired).

Press  to select the desired audible mode. The alert can be set as either audible or vibrate.

 
If the Audible On function is set (), the pager will alert.

If the Audible Off function is set (), the pager will be on vibrate mode. Audible Mode applies to all alerts, including reminder alert, alarm, etc.

Note: If the Alert has been set for sleep (no alert),
setting the Audible On/Off Function will not be activated.

FUNCTION MENU

Setting Display Zoom

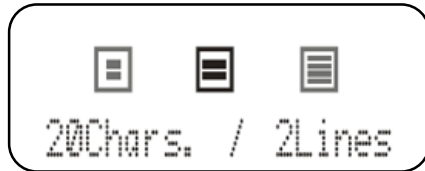

Enable Zoom-In Screen

When this feature is enabled, the standard 4-line Display is converted to a 2-line Display. The characters are enlarged to increase message readability. From the Function Menu:

Press  or  to move the cursor to display "**ZOOM**".

Press  to display the Zoom screen.

Press  or  to move the cursor.

Press  to activate the Zoom.

FUNCTION MENU

Enabling Reminder Alert

When this feature is enabled and there are unread Inbox messages, the pager will alert the user with a short beep or vibration depending on the current Inbox alert type or Audible mode. The pager does not emit reminder alerts for Info messages, or messages with no alert setting.

To Enable Reminder Alert

From the Function menu, press  or  to move the cursor to display **"ENABLE REMINDER"**. Press  to activate the current setting.

To Disable Reminder Alert



From the Function menu, press  or  to move the cursor to display **"DISABLE REMINDER"**. Press  to activate the current setting.

FUNCTION MENU

Locking and Unlocking Messages

Up to 10 messages can be locked to prevent them from being deleted or from being replaced when the memory is full.

To Lock/Unlock a Message

From the Inbox Message Status Screen, press  or  to select the message you want to lock or unlock.

Press  and then press  or  to move the cursor to show "**LOCK**" or "**UNLOCK**".



Press  to activate the setting.

To lock or unlock a message while reading it, follow the last two steps above while the message is displayed.

Note: Info and Saved Messages can not be locked.

FUNCTION MENU

To Delete One Message

From the Inbox Message Status Screen, press  or  to select the message you want to delete.

Press  and then press  or  to move the cursor to show "**DELETE**".

Press  to activate the setting.

To Delete All Messages

From the Inbox / Info / Saved Message Status Screen, press  or  to select the message you want to delete.

Press  and then press  or  to move the cursor to show "**DELETE ALL**".

Press  to activate the setting.

Note: Neither a NEW Inbox message nor a LOCKED message can be deleted by using the Delete All function. Using Delete all with the Info, will only delete those messages in the current subfolder.

FUNCTION MENU

Moving A Message to the Saved Folder



From the Inbox / Info Message Status Screen, press  or  to select the message you want to move.

Press  and then press  or  to move the cursor to show "**NOTEBOOK**".

Press  to activate the setting.

To Move a message while reading it, follow the last 2 steps above while the message is displayed.

Selecting the Info Alert Type

From the Info Message Status Screen, press  or  to select the message you want to set alert.

Press  and then Press  or  to move the cursor to show "**ALERT**".

Press  or  to move the cursor to the desired alert type.

Press  to activate the your setting.





While reading a message, follow the last four steps.

Note: When Inbox Pager alert is set to SLEEP , all alerts revert to SLEEP regardless of the current mail alert type.

FUNCTION MENU

 
 
Display Lock

The device lock feature uses the four buttons of the pager for the passcode.






Note:  Button appears 'L' character  Button appears 'C' character
 Button appears 'R' character  Button appears 'E' character

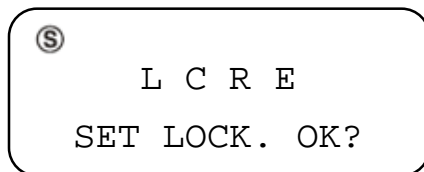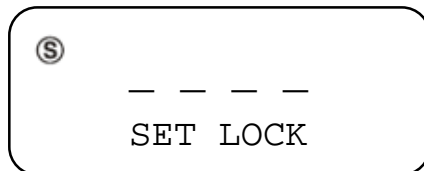Lock Enable:

When the pager is first received the access code will be blank. If the user wants to enable the feature they must follow these steps.






Set Lock Screen

 
 
From the Function menu, press  or  to move the cursor to display "**SET LOCK**".
Press  to display the Set Lock screen.
Press any 4 button sequence to enter the lock code
Press  to accept the entered sequence or
Press  to start over

FUNCTION MENU

Immediate Lock Enable:

Normally the pager will automatically lock after five minutes of inactivity. In order to immediately lock the pager, from the Function menu, press  or  to move the cursor to display "LOCK NOW" and press 

Changing the Passcode:

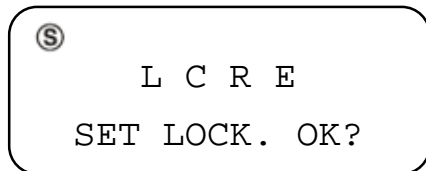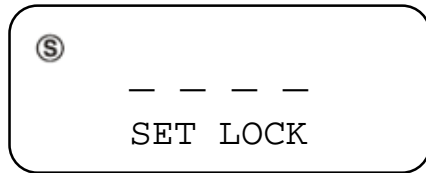

Set Lock Screen

From the Function menu, press  or  to move the cursor to display "**SET LOCK**".

Press  to display the Set Lock screen.

Enter the current 4 button sequence to enter the lock code.

 
Press a new 4 button sequence to enter the lock code

Press  to accept the entered sequence or

Press  to start over


FUNCTION MENU

Disabling the Passcode:

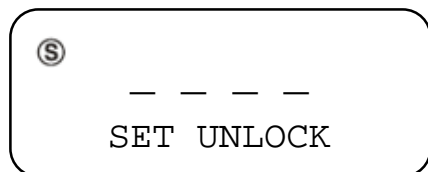

Set Unlock Screen

From the Function menu, press  or  to move the cursor to display **"SET UNLOCK"**.

Press  to display the Set Unlock screen.

Enter the current 4 button sequence to authorize the change.

Press  to accept the entered sequence or

Press  to start over

LIMITATION OF LIABILITY:

Neither your Wireless Provider nor Sun Telecom International is responsible for data that may be damaged or lost at any time, including, without limitation data lost or damaged during the servicing of Sun Telecom International hardware. In as much as the wireless data service provided, we cannot guarantee or warrant that the wireless data service will always be available or will always function properly. For this and other reasons, the wireless data service should not be relied upon for the transmission of data relating to emergency or life-threatening or mission critical situations, and Sun Telecom International disclaims any liability on its behalf and on behalf of its Wireless Providers for events or damages resulting from such reliance or the failure of the wireless data service to perform or to be available for your use of the wireless data service, including, without limitation, the lack of service coverage in the area in which YOU wish to use the wireless solution. To the extent the third party providing the wireless data service provides any warranties or guarantees that may be passed on to YOU, such warranties and / or guarantees are automatically passed on to YOU without any further effort on your part or on the part of Sun Telecom International. Neither Sun Telecom International nor your wireless provider shall in any way be liable to you for any damages you suffer or incur (including, but not limited to, general, special, consequential or incidental damages including damages for loss of business profits, business interruption, loss of business information and the like and personal injury or wrongful death damages) arising from or in connection with the use or performance of our product, even if Sun Telecom International or your wireless solution provider are aware of the possibility of such damages. This limitation is intended to apply and does apply without regard to whether such damages are claimed, asserted or brought in an action or claim sounding in tort or contract, or on the warranty, or under any other law or form of action.

INFORMATION TO USER:

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient / Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

INSTALLATION AND OPERATING INSTRUCTIONS:

**This Equipment Is Suitable For Use In Class I, Division 2,
Groups A, B, C and D Or Non-Hazardous Locations Only.**

WARNING - EXPLOSION HAZARD

Substitution Of Components May Impair Suitability For Class I, Division 2.

AVERTISSEMENT - Risque d'explosion

**la substitution de composants peut compromettre la convenance
pour la Classe I, Zone 2 ou pour la Classe I, Division 2.**

WARNING - EXPLOSION HAZARD

Do Not Disconnect Or Change Battery Unless The Area Is Known To Be Non-Hazardous.

AVERTISSEMENT - RISQUE D'EXPLOSION

**AFIN D'EVITER TOUT RISQUE D'EXPLOSION, S'ASSURER QUE L'EMPLACEMENT
EST DESIGNE NON DANGEREUX AVANT DE CHANGER LA BATTERIE.**