



T5 PAGER USER INTERFACE
INSTRUCTIONS
JUNE 1, 2016

Introduction

This document provides detailed instructions on navigating some of the user interface (UI) functions of the Spok T5 pager. The functions detailed are

- Setting the screen lock passcode
- Unlock the Device Screen Lock
- Accessing the device backlight
- Setting the display zoom
- Setting the time and date

General User Interface Navigation

The T5 pager has four user interface buttons.

Left & Right Buttons


- Use to navigate through the Function menu and through messages
- Use to navigate through time, alarm, and date setting function

Escape Button

- Use to enter the Function menu mode
- Use to turn the Backlight on and off
- Use to exit to current Function mode

Enter Button

- Use to turn the pager on and off
- Use to read the received message
- Use to activate your selection
- Use to adjust the time, alarm, and date setting functions

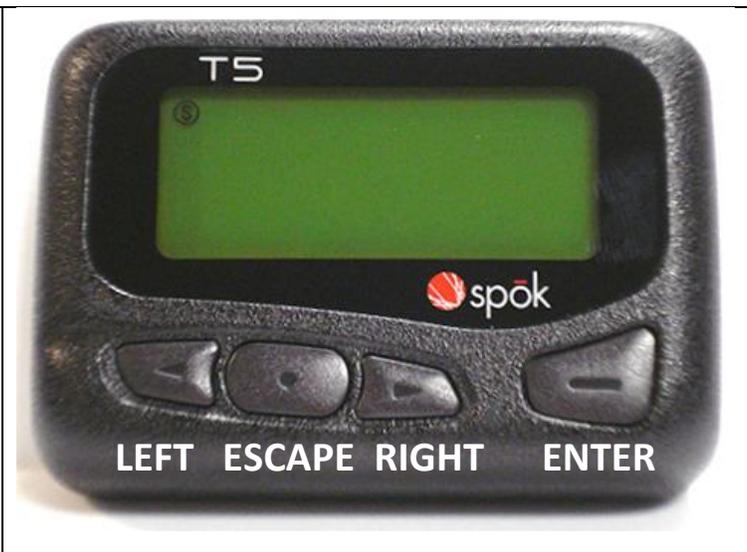

Instructions

Set the Screen Lock Passcode


#	INSTRUCTIONS	SCREEN
1	From the main screen, press the Escape button to enter the function menu mode	
2	Press the Right button until the icon highlight is on the Set Lock icon	
3	Press the Enter button to select the Set Lock function. The Set Lock screen will appear.	

#	INSTRUCTIONS	SCREEN
4	<p>Enter a four button passcode sequence.</p> <ul style="list-style-type: none"> • Left button = L • Escape button = C • Right button = R • Enter button = E <p>When the screen says “SET LOCK. OK?” press the Enter button to accept or the Escape button to cancel.</p>	

Unlock the Device Screen Lock

#	INSTRUCTIONS	SCREEN
1	<p>If the device screen lock is enabled with a passcode, it will automatically activate after 10 minutes of device inactivity. When the device screen lock is active and the user presses Enter to try to read an Inbox message, the Enter Lock screen will appear.</p> <p>Enter the four button passcode sequence that was set previously.</p> <ul style="list-style-type: none"> • Left button = L • Escape button = C • Right button = R • Enter button = E <p>After the 4th button press the user will be returned to the main screen. If the sequence was correct, the user will be able to press Enter to access the Inbox and read messages. If the sequence was incorrect, the Enter Lock screen will appear again.</p>	

Access the Device Backlight
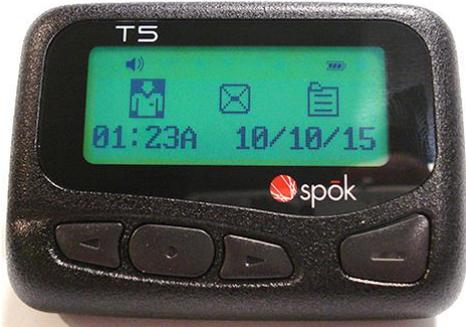
#	INSTRUCTIONS	SCREEN
1	<p>From any pager screen, press and hold the Escape button for about two seconds to turn on the screen backlight.</p> <p>Press and hold the Escape button again to turn off the screen backlight</p>	

Setting the Display Zoom

#	INSTRUCTIONS	SCREEN
1	<p>From the main screen, press the Escape button to enter the function menu mode</p>	
2	<p>Press the Right button until the icon highlight is on the Zoom icon</p>	
3	<p>Press the Enter button to select the Zoom function. The Zoom screen will appear.</p> <p>Press the Left or Right button until the icon highlight is on the desired zoom level (20x4, 20x2 or 16x2) and press the Enter button to select.</p>	

Setting the Time and Date

#	INSTRUCTIONS	SCREEN
1	From the main screen, press the Escape button to enter the function menu mode	
2	Press the Right button to highlight the Set Time icon	

#	INSTRUCTIONS	SCREEN
3	<p>Press the Enter button to select the Set Time function. The Set Time & Date screen will appear.</p> <p>Press the Left or Right buttons to highlight the time or date number to be adjusted. Press the Enter button to increment the specific number.</p> <p>Press the Escape button to save and exit.</p>	