



# GenA™ Pager User Manual



**Version 01/22**

## Table of Contents

PURPOSE .....	3
FEATURES .....	3
DEVICE DESIGN .....	4
Mechanical Features .....	4
Button Locations .....	4
Battery Insertion and Removal .....	4
DESCRIPTION OF SCREEN INDICATORS & ICONS .....	5
CONTROL BUTTONS .....	6
MAIN DEVICE SCREENS .....	7
TURNING THE PAGER ON AND OFF .....	8
Turning the Pager On .....	8
Turning the Pager Off .....	8
SPECIAL PAGER POWER OFF SCREENS .....	9
MAIN SCREEN .....	9
Main Screen Folders .....	10
Bottom Row Status Icons .....	10
MESSAGE OPERATIONS .....	11
Messages List Screen (Inbox and Groups Folders) .....	11
Messages List Screen .....	11
Messages List Popup .....	12
Messages List Screen Behaviors .....	12
Messages List Screen (Saved Folder) .....	12
Messages List Screen .....	12
Messages List Action Popup (Saved Folder) .....	13
Message Read Screen (Inbox, Groups and Saved) .....	14
Inbox/Groups/Saved Message Read Screens .....	14
Read Messages Screen Navigation .....	14
Read Messages Action Popup .....	15
Group Folder Sub-Folder Screen (Groups) .....	16
Messages List Popup .....	17
SETTINGS .....	18
Quiet Mode .....	19
Set Date & Time .....	20
Set Alarm .....	21
Set Inbox Alert .....	22
Set Message Zoom .....	23
Set Reminder .....	23
Set Lock Code .....	24
Set Do Not Disturb .....	27
Key Vibe .....	28
Inbox Size .....	28
About .....	29

## PURPOSE


This user manual is intended to provide detailed user interface and operating instructions for the Spok GenA™ pager. The GenA™ pager is offered exclusively by Spok.

## FEATURES


- Device
  - High resolution E-Paper display with auto-on front-light
  - 16 Flex long/short addresses
  - Uses one alkaline AA battery
- Main Screen Status
  - New message indication (Message Icon)
  - Unread message count indication for Inbox and Groups folders
  - Four segment battery status display
- Message Management
  - Up to 99 Inbox folder messages
  - Up to 99 Groups folder messages across all sub-folders
  - Up to 99 Saved folder messages
  - Inbox and Groups folder message lock with Lock Icon
  - 15 groups sub-folders (optional)
  - Message with Time & Date stamp
  - Message continuation icon
  - All & individual message delete
  - Message slot number
  - Duplicated message indication (with icon)
- Configuration Settings
  - 5, 6, 7 & 10 line message text display with proportional font
  - Quiet Mode (User Selectable)
  - One alarm with alert text
  - Alerts: One beep, one standard and seven custom alerts, chirp, vibrate
  - Do Not Disturb time (no audible alert)
  - 2-minute Reminder Alert (User Selectable)
  - Manual power On/Off
  - Smart unread reminder On/Off (Optional)
  - Screen name
- Remote Programming
  - Access lock clear
  - Message and encryption key delete
  - Screen name update
  - Group address add/delete
- Other
  - Always on clock display
  - Custom power up logo (Optional)
  - Message encryption (AES-128)

## DEVICE DESIGN

### Mechanical Features

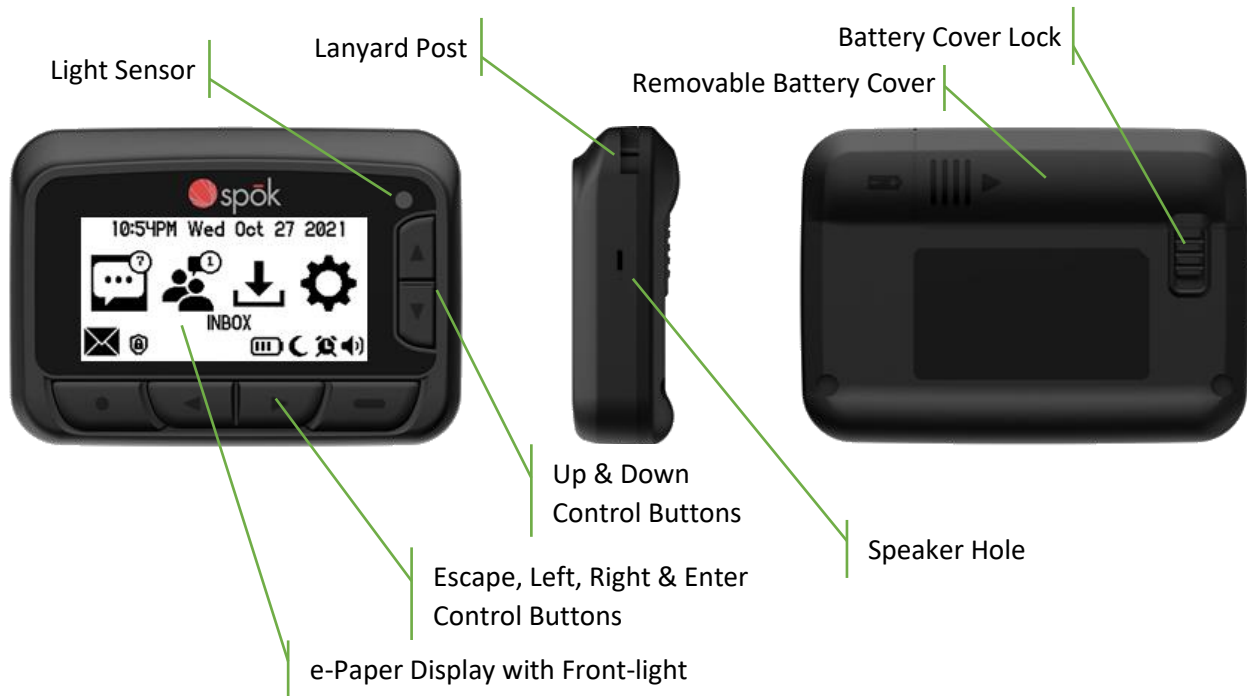

### Button Locations

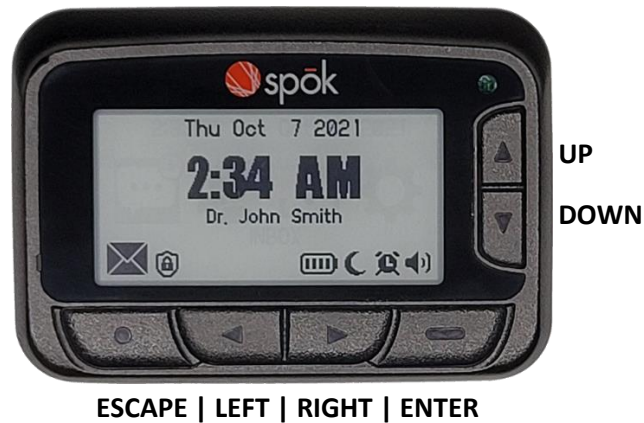

### Battery Insertion and Removal

- Slide the battery cover lock away from the cover
- Slide the battery cover about ¼" out until the two alignment dots are lined up and then lift the cover away from the pager
- Insert a AA battery with the negative end to the spring contact
- Replace the battery cover by inserting and aligning the dots. Then slide the cover closed and slide the battery cover lock into place



## DESCRIPTION OF SCREEN INDICATORS &amp; ICONS

**Main Screen Folder Icons**

Inbox



Groups



Saved



Settings

**Main and Time Screen Status Icons (Bottom Row)**

Audio Alert



Silent Alert (Vibration)



Disabled Alert



Alarm Enabled



Full Battery Status



3/4 Battery Status



Low Battery Status



New Message Indicator



Full Encrypted Message Support Indicator



Do Not Disturb Indicator



2/4 Battery Status



1/4 Battery Status

**General Navigation Indicators**

Current Setting Indicator



Before page indicator



Next page indicator

**Message Status Icons**

Unread Message Indicator



Locked Message Indicator







Duplicate Message Indicator


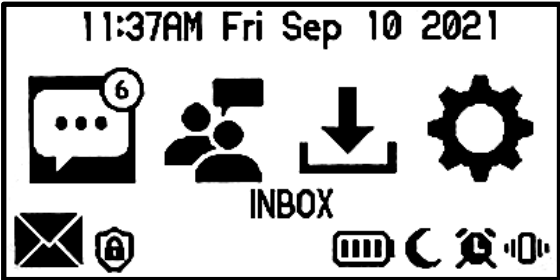
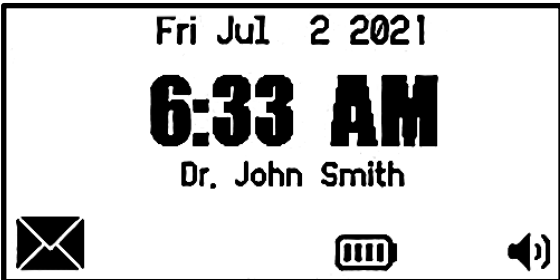


Unread &amp; Duplicate Message Indicator

## CONTROL BUTTONS

BUTTON	FUNCTIONS
<p>Left and Right</p> 	<ul style="list-style-type: none"> <li>• Used to move a selection highlight left or right.</li> <li>• Used to navigate through the Settings menu items.</li> <li>• Used to move the previous/next page in message list screen.</li> <li>• Used to move the previous/next message in message view screen.</li> <li>• Used to navigate through Date &amp; time, alarm and Do not disturb time setting values.</li> </ul>
<p>Enter</p> 	<ul style="list-style-type: none"> <li>• Used to open an action popup (with 2 sec press).</li> <li>• Used to open a message from a message list screen.</li> <li>• Used to activate a highlighted selection.</li> <li>• Used to move to the next page of a message when in the message view screen.</li> <li>• Used to confirm adjusted Date &amp; time, Alarm and Do not disturb time setting value changes.</li> </ul>
<p>Escape</p> 	<ul style="list-style-type: none"> <li>• Used to exit a menu or a menu popup.</li> <li>• Used to cancel a selection.</li> <li>• Used to turn the front light on with a 2 sec press.</li> </ul>
<p>Up and Down</p> 	<ul style="list-style-type: none"> <li>• Used to move Up and Down a list.</li> <li>• Used to move Up and Down the Settings menu and through a message list screen.</li> <li>• Used to move Up or Down a message line by line in a message view screen.</li> <li>• Used to change values in the Date &amp; time, Alarm and Do not disturb time setting functions.</li> </ul>

## MAIN DEVICE SCREENS

SCREEN	NOTES
	<p><u>Power-up Screen</u></p> <p>This screen will appear when the pager is turning on. It shows the screen name and a logo graphic</p>
	<p><u>Main Screen</u></p> <p>This screen will appear after the pager turns on or when the user exits the Inbox, Groups, Saved or Settings list or when the user presses a button while on the Time screen.</p> <ul style="list-style-type: none"> <li>• The screen shows the current time &amp; date at the top</li> <li>• The Inbox, Groups (if enabled), Saved and Settings folder icons are shown in the middle</li> <li>• The bottom row shows the status icons</li> </ul>
	<p><u>Time Screen</u></p> <ul style="list-style-type: none"> <li>• This screen automatically appears after the user hasn't pressed a button for 30 seconds.</li> <li>• It shows the date and time, the device screen name, and the device status icons in the bottom row</li> </ul>




## TURNING THE PAGER ON AND OFF

### Turning the Pager On

- If the pager has a good battery but was switched off, press the Enter button for 2-3 seconds
- If the pager doesn't have a battery, insert a fresh battery and it will turn on automatically
- If the pager battery depleted, replace with a fresh battery and it will turn on automatically

**IMPORTANT:** The pager has an internal power reservoir. If the reservoir is depleted when a new battery is inserted, it may take up to 15 seconds before the pager can turn on.


### Turning the Pager Off

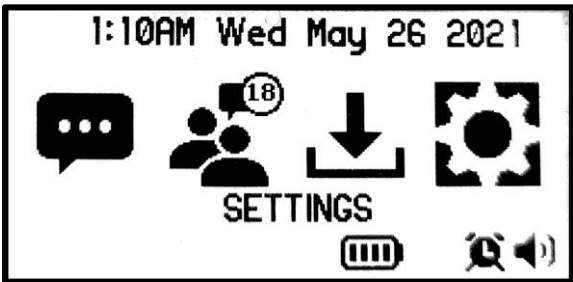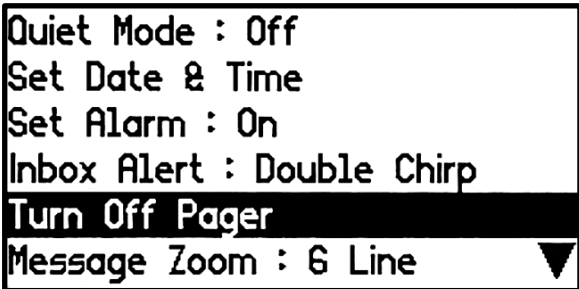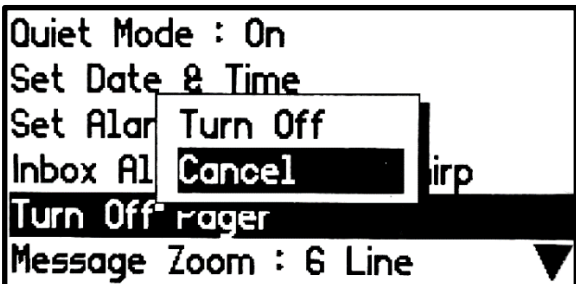SCREEN	NOTES
	<p><u>Main Screen</u></p> <ul style="list-style-type: none"> <li>• Press any button to display the Main screen.</li> <li>• Press the Left or Right buttons to move the highlight to the Settings icon and press the Enter button to go into the Settings list screen.</li> </ul>
	<p><u>Settings Folder Screen</u></p> <ul style="list-style-type: none"> <li>• Press the Down button to move the highlight to the Turn Off Pager item and press the Enter button</li> </ul>
	<p><u>Turn Off Popup</u></p> <ul style="list-style-type: none"> <li>• Press the Up button to select Turn Off and press the Enter button to turn off the pager.</li> <li>• The Pager Off screen will appear</li> </ul>







## SPECIAL PAGER POWER OFF SCREENS

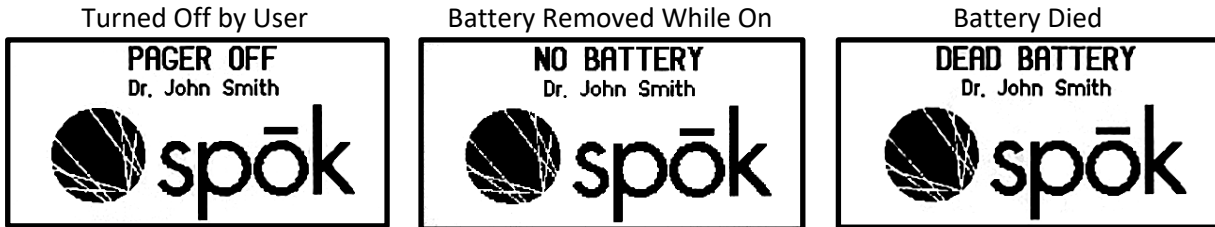E-Paper screens permanently display their last image when power is removed. To ensure that personal or confidential information is removed from the display when the pager is powered off, the pager will automatically clear its screen when it is turned off, the battery is removed, or the battery dies while still inside the pager. In these situations, the pager will indicate how it powered off so that the user will know how to turn the pager on again.



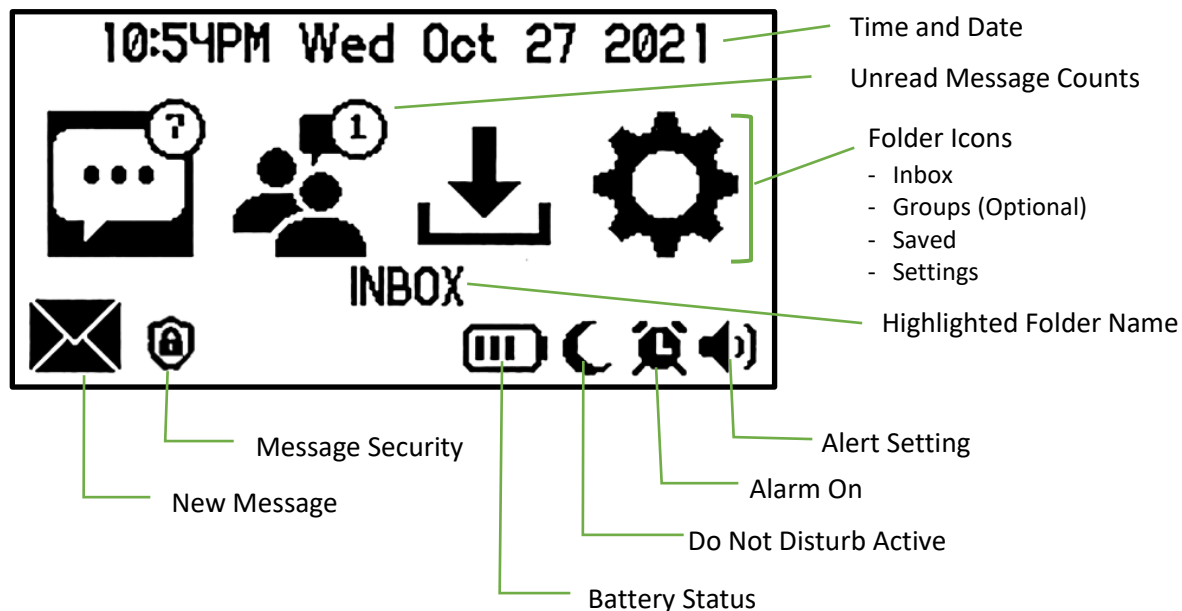



## MAIN SCREEN







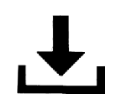

Press the  or  buttons to move the highlight between the Inbox/Group/Saved and Settings folders. Press the  button to select the highlighted folder.

## Main Screen Folders

FOLDER NAME	ICON	NOTES
Inbox		<ul style="list-style-type: none"> <li>Personal messages appear in this folder</li> <li>An upper right-side number will appear on the icon to show the number of unread messages in the folder</li> </ul>
Groups		<ul style="list-style-type: none"> <li>Group messages appear in this folder</li> <li>An upper right-side number will appear on the icon to show the number of unread messages in the folder</li> <li>The folder is not visible if group address sub-folders aren't programmed in the pager</li> </ul>
Saved		<ul style="list-style-type: none"> <li>Any saved messages appear in the Saved folder</li> <li>Messages are sorted in the order they were saved</li> </ul>
Settings		<ul style="list-style-type: none"> <li>Device settings can be viewed and updated within the Settings folder</li> </ul>


## Bottom Row Status Icons

STATUS	ICON(S)	NOTES
New Message		<ul style="list-style-type: none"> <li>Appears when a new message is received in either the Inbox or Groups folder</li> </ul>
Message Security		<ul style="list-style-type: none"> <li>Displays when all programmed pager addresses are encrypted</li> </ul>
Battery		<ul style="list-style-type: none"> <li>Shows the current battery level</li> <li>A low battery popup will also appear when the battery needs to be replaced</li> </ul>
Alarm On		<ul style="list-style-type: none"> <li>Appears when an alarm is enabled</li> <li>The alarm is set up and activated from the Settings folder</li> </ul>
Do Not Disturb		<ul style="list-style-type: none"> <li>Appears when Do Not Disturb is enabled <u>and</u> currently active</li> <li>The Do Not Disturb feature is set up and enabled from the Settings folder</li> </ul>
Alert Setting		<ul style="list-style-type: none"> <li>Shows the current alert setting. Audible, vibrate or off</li> <li>The alert settings are set up from the Settings folder</li> </ul>

## MESSAGE OPERATIONS

### Messages List Screen (Inbox and Groups Folders)

#### Messages List Screen

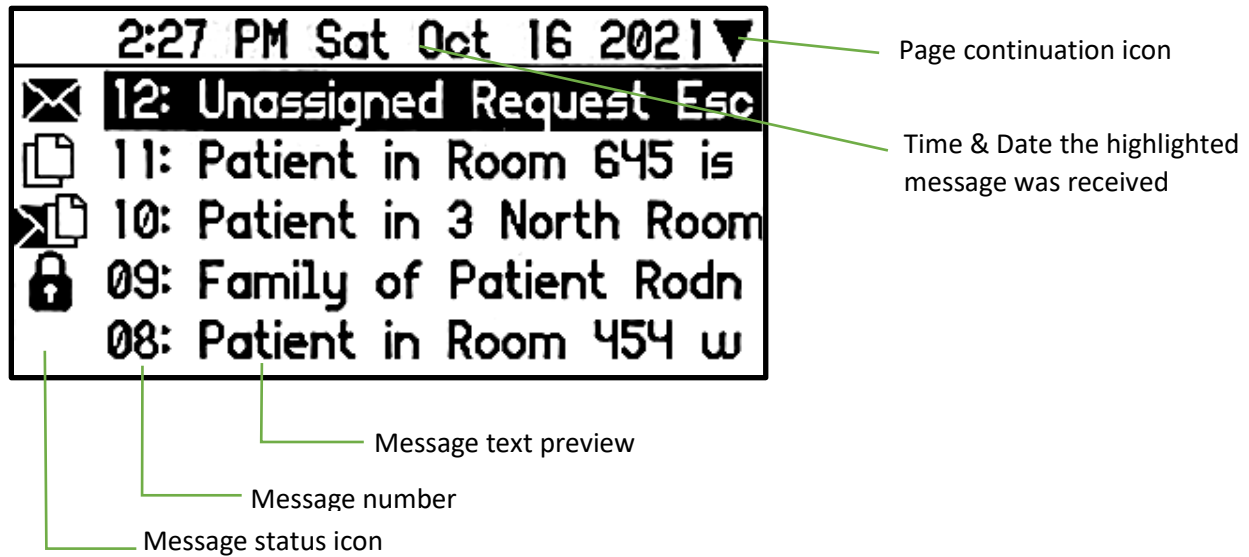

Message status icons are described below:


MESSAGE STATUS	ICON(S)	NOTES
Unread		<ul style="list-style-type: none"> <li>The message has not been read</li> </ul>
Read	<Blank>	<ul style="list-style-type: none"> <li>The message has been read</li> </ul>
Locked		<ul style="list-style-type: none"> <li>The message has been locked to prevent accidental deletion</li> <li>Up to half of max message number can be locked</li> </ul>
Duplicate		<ul style="list-style-type: none"> <li>An identical message was previously received</li> </ul>
Unread & Duplicate		<ul style="list-style-type: none"> <li>The message has not been read and is a duplicate</li> </ul>

- The date/time information at the top of the display shows the date/time that the selected message was received on the pager based on the pager's time setting.
- As you navigate up and down through the list, the selected message will be highlighted in reverse video
- The ▼ at the upper right indicates that there are more messages below that displayed
- Press the or button to move the selection up or down. Pressing or when at the top or bottom of the list will move the selection to the bottom or top of the list respectively (wrap-around).
- Press the or button to move the message list up or down page by page. Pressing or when at the top or bottom of the list will move the selection to the bottom or top respectively (wrap-around).
- Press the button to view the message in the message read screen.
- Press the button for 2 sec, to bring up the message list popup.


## Messages List Popup


When the Enter button is pressed for 2 seconds on a highlighted message, an action popup appears. The action popup displays actions that can be performed on a highlighted message or within the message list.

Action Popup with an Unread or read Message Selected

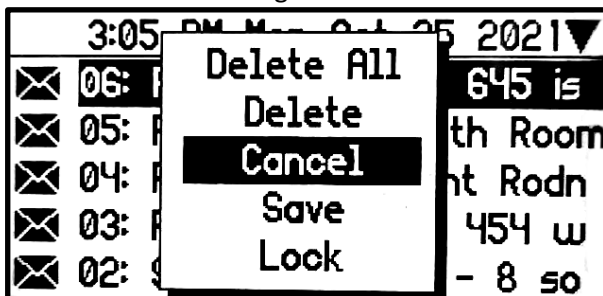

Action Popup with a Locked Message Selected

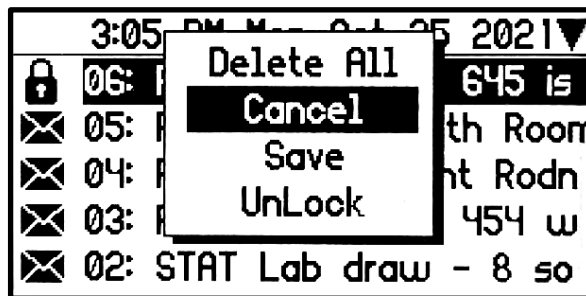


ACTION	DESCRIPTION
Delete All	All read messages are deleted. Unread and locked messages are <u>not</u> deleted.
Delete	The highlighted message is deleted. If the popup is brought up when a locked message is selected, this action will not appear
Cancel	The action popup is cleared. This item is highlighted by default
Save	The highlighted message is moved to the Saved folder and removed from the message list
Lock / Unlock / Lock Full	The highlighted message is locked and its message status icon will change to a Locked  icon. If the popup is brought up when a locked message is selected, the delete action will not appear and an unlock action will appear and its message status icon will change to blank to indicate a read message. Up to half of the max message number can be locked. The saved folder does not have a lock function.

## Messages List Screen Behaviors

When the message memory is full for with the Inbox or Groups folders, messages will be automatically deleted to make room for new messages. All read messages will be deleted, oldest first, followed by unread messages, oldest first. Locked messages will not be automatically deleted unless first unlocked.

## Messages List Screen (Saved Folder)

### Messages List Screen

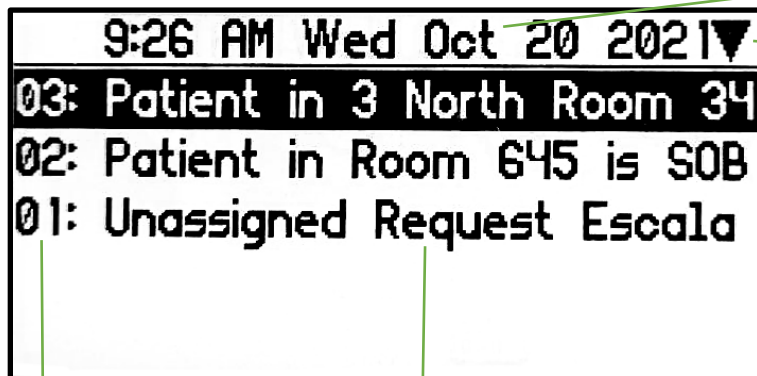

Received time & date of highlighted message

Page continuation icon


Message number

Message text preview

### Messages List Action Popup (Saved Folder)

When the Enter button is pressed for 2 seconds on a highlighted message an action popup appears. The action popup shows actions that can be performed on a highlighted message.


Action Popup

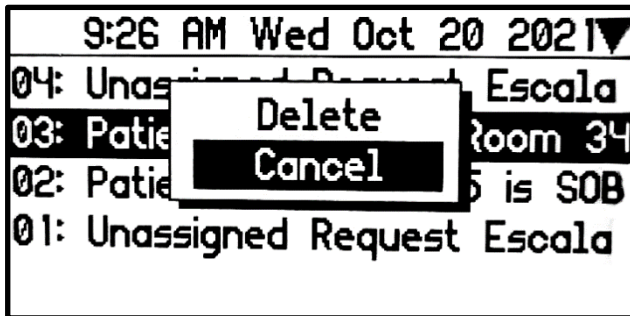

ACTION	DESCRIPTION
Delete	The highlighted message is deleted.
Cancel	The action popup is cleared. This item is highlighted by default





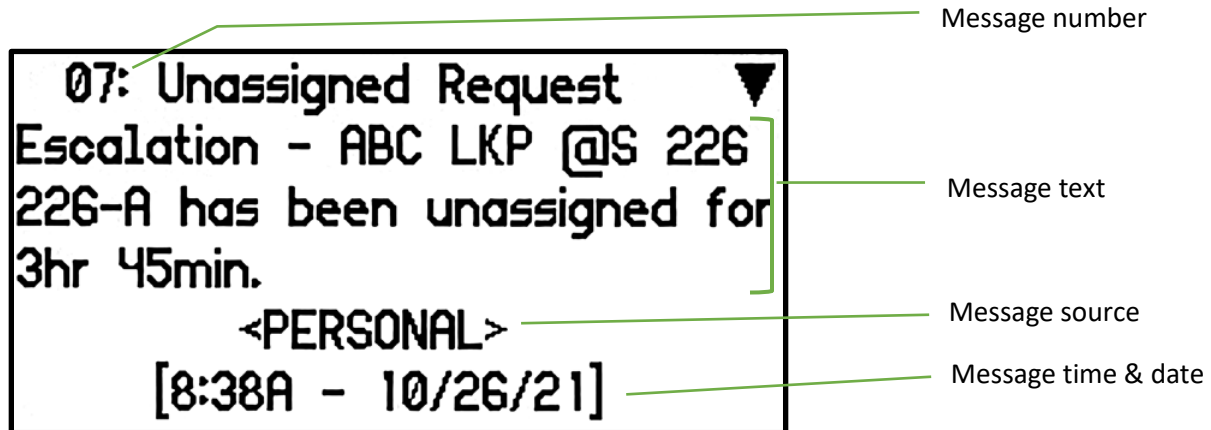

## Message Read Screen (Inbox, Groups and Saved)

## Inbox/Groups/Saved Message Read Screens



The Message Read Screen displays the first page of the selected message.

## Read Messages Screen Navigation

NAVIGATION	BUTTON(S)	NOTES
Line by line	 or 	<ul style="list-style-type: none"> <li>The Up &amp; Down buttons allow the user to move up or down the message text line-by-line</li> </ul>
Page by page		<ul style="list-style-type: none"> <li>Pressing the Enter button moves the message text display down page-by-page</li> </ul>
Exit		<ul style="list-style-type: none"> <li>Pressing the Escape button returns the user to the message list screen</li> </ul>
Message to message	 or 	<ul style="list-style-type: none"> <li>Pressing the Left or Right buttons allow the user to move to the previous or next message</li> </ul>


When entering the Message Read Screen of an unread message, the message changes status from unread to read.


When the bottom of the message is reached a 'Message Options' selection appears at the bottom of the screen. Pressing Enter again will bring up the message action popup.




**NOTES:** The Message Source text that appears below the message content is programmed within the pager. It indicates which pager address the message was received on.

## Read Messages Action Popup

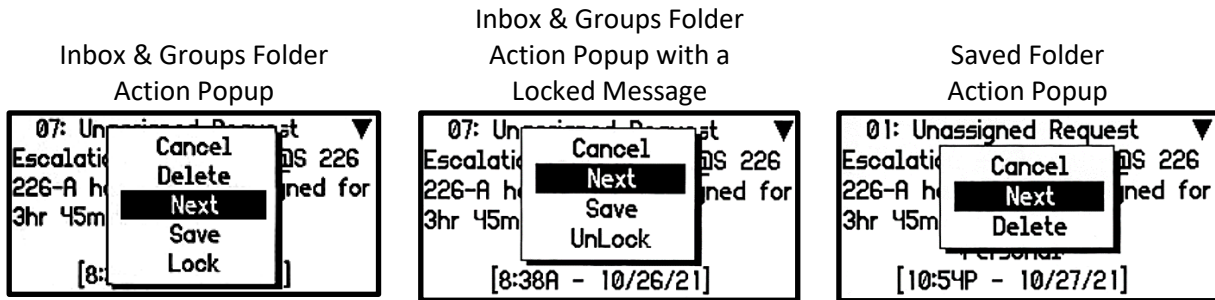When the Enter button is pressed for 2 seconds on a message an action popup appears. The action popup shows actions that can be performed on the message.




ACTION	DESCRIPTION
Cancel	The action popup is cleared. This item is highlighted by default
Delete	The highlighted message is deleted. If the popup is brought up when a locked message is selected, this action will not appear
Next	Displays the next oldest message in the folder
Save	The highlighted message is moved to the Saved folder and removed from the message list
Lock / Unlock	<p>The highlighted message is locked and its message status icon in the list screen will change to a Locked  icon. If the popup is brought up when a locked message is selected, the delete action will not appear and an unlock action will appear and its message status icon will change to blank to indicate a read message.</p> <p>Up to half of max message number can be locked.</p> <p>The saved folder does not have a lock function.</p>





- Press the  or  button to navigate through the popup menu.
- Press the  button to execute the action.
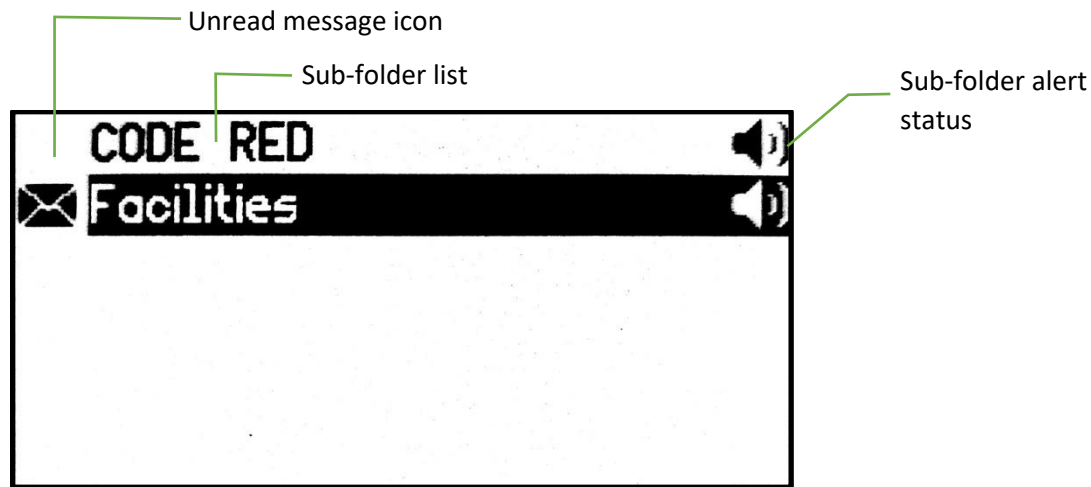
### Group Folder Sub-Folder Screen (Groups)

The Groups folder (If enabled within the pager) contains one or more sub-folders. Each sub-folder contains messages from separate group addresses programmed into the pager. The sub-folder name is pre-programmed in the pager and each sub-folder can be configured by the user with a unique alert.



Group Sub-folders Screen

- Press the  or  button to highlight the desired sub-folder.
- Press the  button to view the messages in the selected sub-folder. If the sub-folder doesn't contain any messages 'No messages' will appear momentarily.
- Press the  button for 2 sec, to enter the sub-folder alert selection screen.







### Notes

1. The sub-folder name is determined when the group address is programmed in the pager
2. Sub-folders with unread messages display the unread message icon on the left.
3. Different alerts can be set for each sub-folder.
4. The sub-folder alert status is displayed on the right side of the folder according to the set alert.

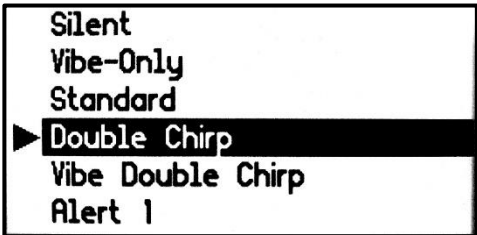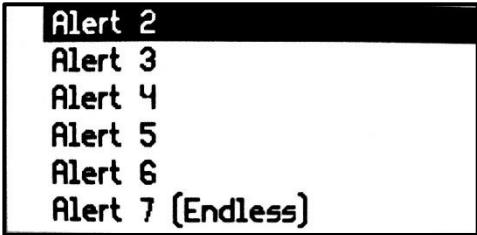




## Messages List Popup

When the Enter button is pressed for 2 seconds on a highlighted sub-folder, an Set Alert screen appears and shows the available alert selections for that sub-folder.

SCREEN	NOTES
 	<p><u>Set Alert Screen</u></p> <ul style="list-style-type: none"> <li>Press the  or  button to select the desired alert type.</li> <li>Press the  button to set the new alert type.</li> <li>Press the  button to cancel the alert selection and exit back to the sub-folder list screen.</li> <li>The standard alert and Alerts 1-6 will alert for 15 seconds</li> <li>Alert 7 will alert continuously until a button is pressed</li> </ul>

## SETTINGS

The Settings folder provides access to the many features incorporated in the pager. When possible, the current setting value is displayed to the right of the menu item for easy reference.

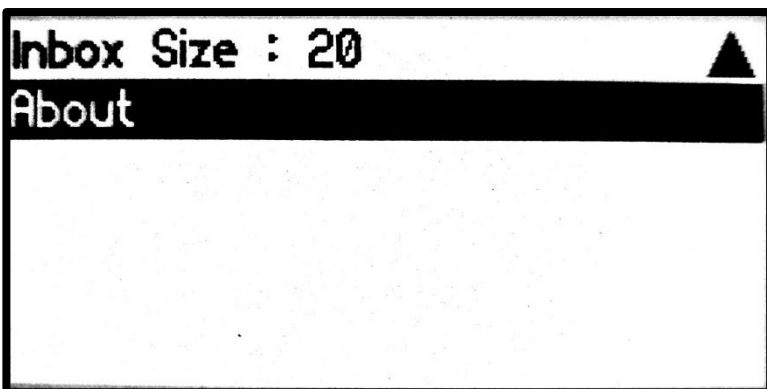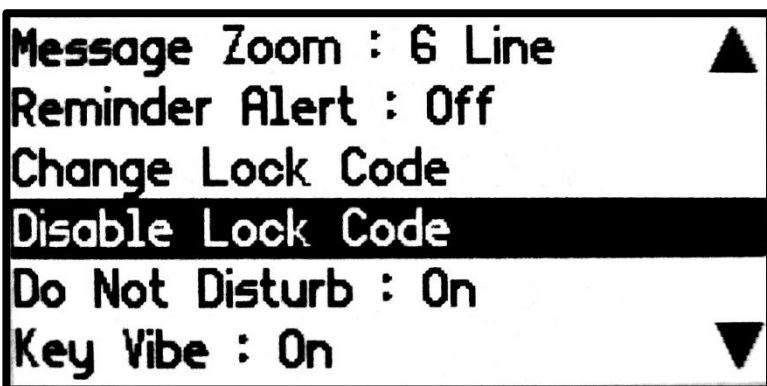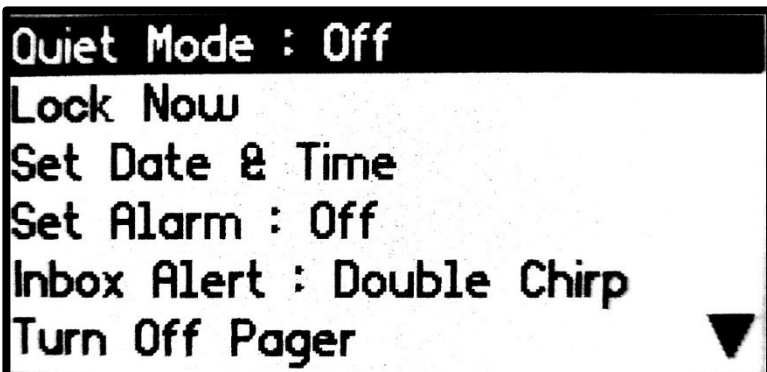


The Lock Now, Change Lock Code and Disable Lock Code items only appear if the Lock feature is enabled on the pager.



## Quiet Mode

The pager alerting can be globally set to audible (Quiet Mode: Off) or silent (Quiet Mode: On).
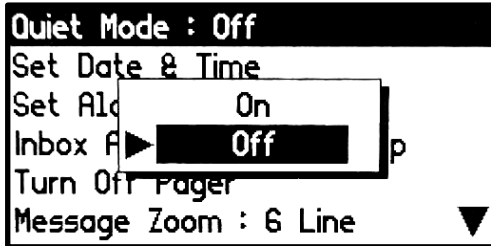
### SCREEN



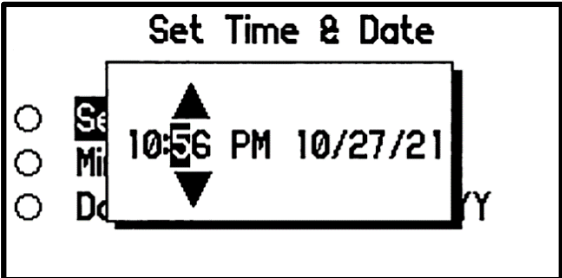










### NOTES

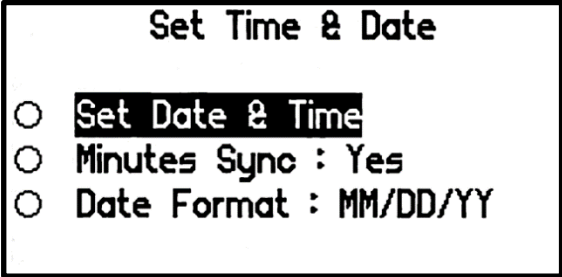- When setting the Quiet mode to on, all alerts are set to vibrate (silent). The alert status on the Main screen will show as .
- The current setting is indicated by the  icon.







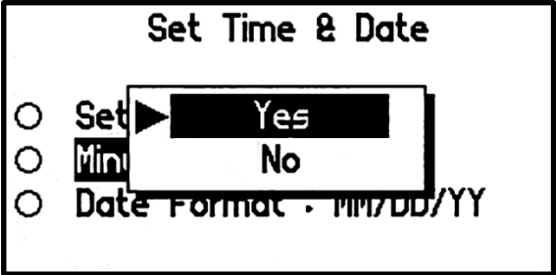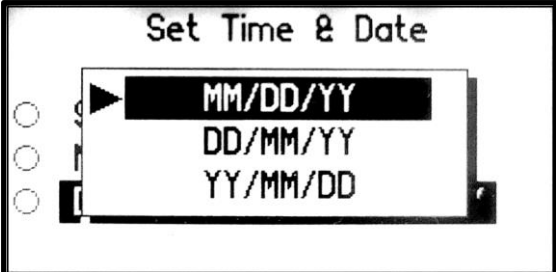



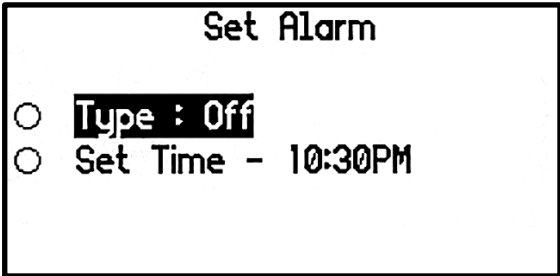


## Set Date & Time

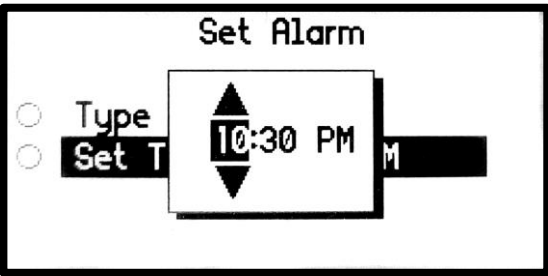The date and time set in the pager appears on the Main and Time screens and determines the date and time displayed for when a message was received.

SCREEN	NOTES
	<p><u>Set Time &amp; Date Menu Screen</u></p> <ul style="list-style-type: none"> <li>Select the option to be updated and press  button</li> </ul>
	<p><u>Set Date &amp; Time Screen</u></p> <ul style="list-style-type: none"> <li>Press the  or  button to move through the Time and Date entries.</li> <li>Press the  or  button to change Time/AM-PM/Date values.</li> <li>Press the  button to accept the updated values.</li> <li>Press the  button to cancel the changes and exit to the Set Time &amp; Date menu screen.</li> <li>When AM-PM value is set to 24, the time display changes to 24-hour format.</li> </ul>
	<p><u>Set Minutes Sync Screen</u></p> <ul style="list-style-type: none"> <li>When set to Yes, the pager's clock minutes value is automatically set based on network time.</li> <li>The date, hours or AM/PM values of the pager clock must be set by the user.</li> </ul>
	<p><u>Set Date Format Screen</u></p> <ul style="list-style-type: none"> <li>The format of the date value used throughout the pager can be selected.</li> </ul>

## Set Alarm

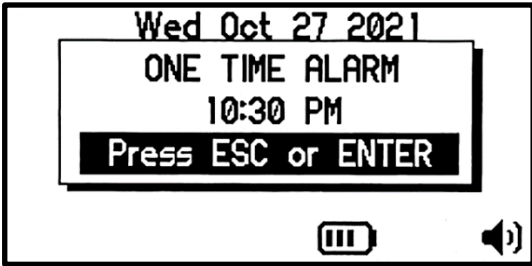One alarm can be set within the pager.





SCREEN	NOTES
 <p>The screen displays the title "Set Alarm" and two options: "Type : Off" and "Set Time - 10:30PM".</p>	<p><u>Set Alarm Menu Screen</u></p> <ul style="list-style-type: none"> <li>Select the Set Alarm option to update and press  button.</li> </ul>
 <p>The screen displays the title "Set Alarm" and a popup menu with three options: "Daily", "One Time", and "Off".</p>	<p><u>Set Type Popup</u></p> <ul style="list-style-type: none"> <li>The alarm works daily when set as Daily.</li> <li>Alarm only works once when set as One Time.</li> <li>When setting a Daily or One Time alarm, the alarm status icon will appear on the Main and Time screens.</li> <li>When set to off, the Alarm status icon will not appear on the Main and Time screens.</li> </ul>
 <p>The screen displays the title "Set Alarm" and a popup menu with three options: "Type", "Set T", and "10:30 PM".</p>	<p><u>Set Time popup</u></p> <ul style="list-style-type: none"> <li>Press the  or  button to move through the time and AM/PM values.</li> <li>Press the  or  button to increase or decrease the time values and the AM/PM setting.</li> <li>Press the  button to set the alarm time value.</li> <li>Press the  button to cancel the changes and exit to the Set Alarm menu screen.</li> </ul>
 <p>The screen displays the date "Wed Oct 27 2021", the alarm type "ONE TIME ALARM", the time "10:30 PM", and the instruction "Press ESC or ENTER".</p>	<p><u>Alarm Event Screen</u></p> <ul style="list-style-type: none"> <li>When the alarm event occurs, a screen popup will appear, and the alarm sound will be heard.</li> <li>The alarm will automatically end after 5 minutes.</li> <li>You can cancel the alarm by pressing the  or  button.</li> </ul>

## Set Inbox Alert


You can set the paging message alert to an audible alert, a vibrating alert, a chirp alert, a silent alert, or one of seven other alerts. All alerts sound for 15 seconds except for Alert 7. Alert 7 alerts continuously when a message is received until a button is pressed. The display front light can also be used to alert when in dark environments.

### SCREEN



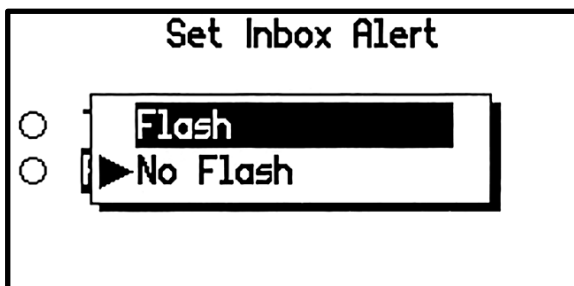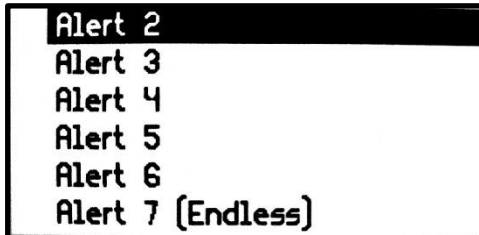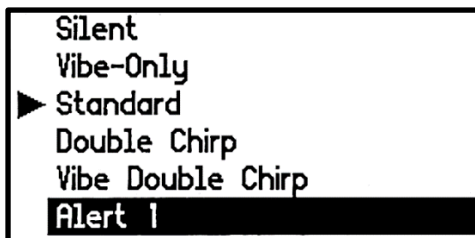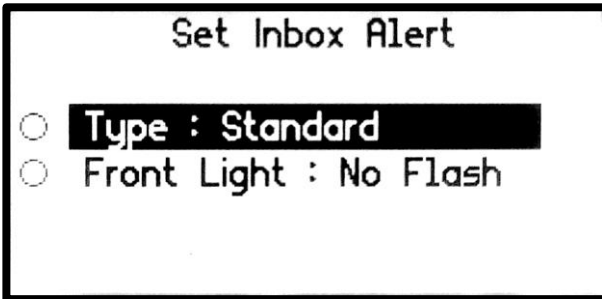

### NOTES



#### Inbox Alert Menu Screen

- Select the Inbox Alert option to update and press  button

#### Set Type Setting Screen





- Press the  or  button to change Alert type.
- Press the  button to set the new Alert type.
- Press the  button to cancel the changed Alert type and exit back to the Set Inbox Alert menu Screen.

#### Set Front Light Setting Popup

- When setting the Front Light value to Flash, the Front Light will flash along with the alert when a message is received.
- The Flash alert is universal for all messages received in both the Inbox and any Groups sub-folder.



## Set Message Zoom

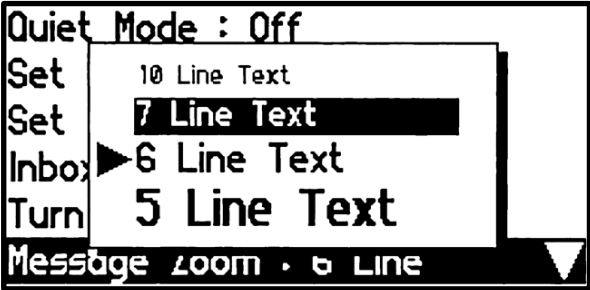Four different text sizes are supported for the message text in the message list and message view screens.

SCREEN	NOTES
	<p><u>Set Message Zoom Setting Popup</u></p> <ul style="list-style-type: none"> <li>Set the text size of the message list, message read, group folder screens</li> <li>Press the  or  button to select the desired text size.</li> <li>The current setting is indicated by the  icon.</li> </ul>

## Set Reminder

When this feature is enabled and there are unread Inbox messages, the pager will alert the user every two minutes with a short beep or vibration depending on the current Inbox alert type or Audible mode.

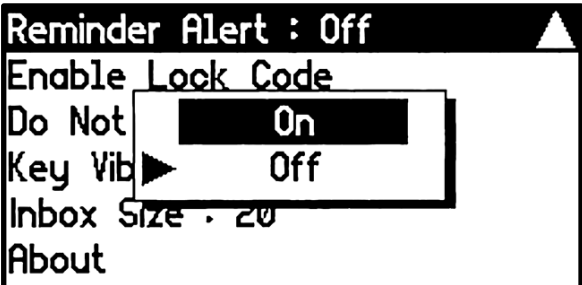SCREEN	NOTES
	<p><u>Set Reminder Alert Popup</u></p> <ul style="list-style-type: none"> <li>If there is one or more unread messages, a double chirp will alert every two minutes.</li> <li>The current setting is indicated by the  icon.</li> </ul>




## Set Lock Code

The Lock Code feature, when enabled by the user, prevents unauthorized persons from reading messages on the device. The message display will lock after the five-minute default inactivity period. To view messages, the user must enter the pre-defined four-button lock code sequence. All six device buttons can be used for the code.

The lock code feature set is determined by device programming. For example, the lock code may be preset without the option to change it or the lock code may be changed but not disabled.

### SCREEN

### NOTES

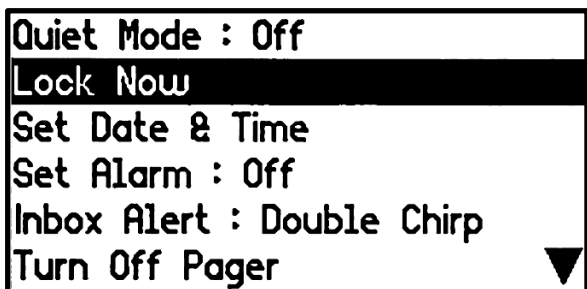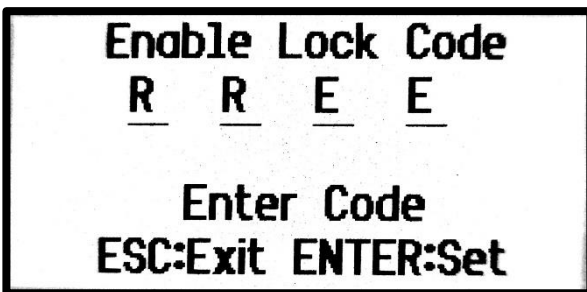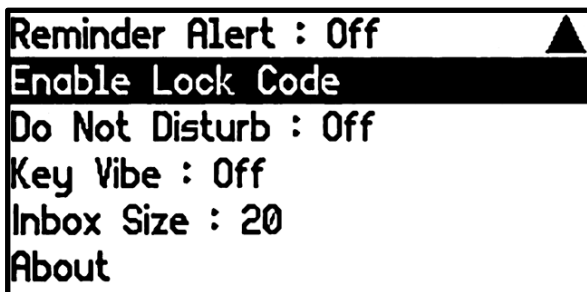









#### Enable Lock Code Setting Screen

- When the Lock Code is disabled, the 'Enable Lock Code' function is available.

#### Enable Lock Code Screen

Press a sequence of four buttons to enter a code.

-  (ESC) = C,  (Enter) = E
-  (Left) = L,  (Right) = R
-  (Up) = U,  (Down) = D
- When the four codes are entered, press  button to activate the Lock function.
- If you press , the Lock Code will be cancelled, and the Lock function will be disabled.
- In the Set Lock Code input window, you cannot cancel until four entries have been made.


#### Lock Now Option

- Normally, when the Lock function is enabled, the Lock function operates after 5 minutes of inactivity. The Lock Now function allows it to be set immediately.




## SCREEN


## NOTES

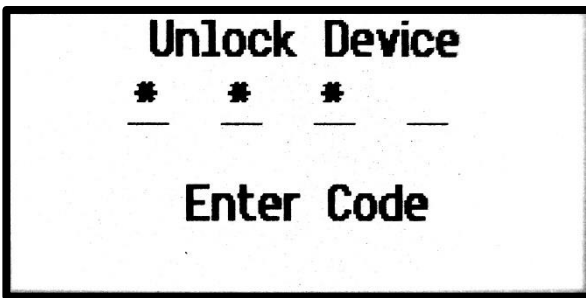Unlock Device Screen


After entering the Main Screen from the Time Screen, and pressing a button, the Unlock Device input screen will appear. If the entered Lock Code is correct, the user can navigate the main screen. If the entered Lock Code is wrong, the main screen is displayed but Lock Code screen is displayed again when the user presses a button.

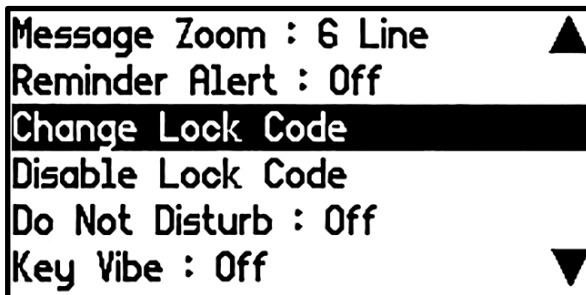Change Lock Code

When the Lock Code feature is enabled, the 'Change Lock Code' function is available for the user to change the lock code.

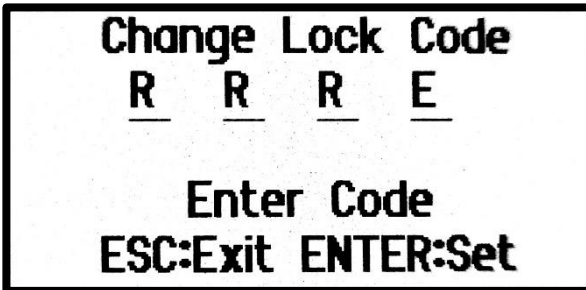Change Lock Code Screen

- (ESC) = C , (Enter) = E
- (Left) = L, (Right) = R
- (Up) = U, (Down) = D
- When four code entries have been made, press button to activate the Lock function with the new lock code.
- If you press , the Lock Code update will be cancelled.
- In the Change Lock Code input window, you cannot cancel the entry until four entries have been made.

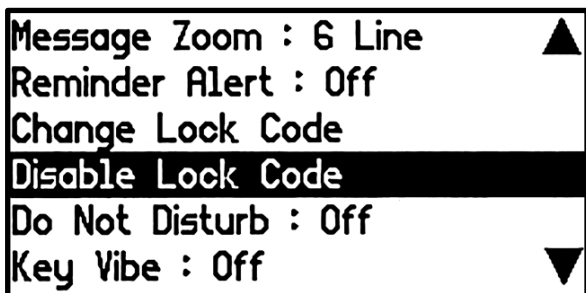Set Disable Lock Code

- When the Lock Code is enabled, the 'Disable Lock Code' function is available.
- When the Lock Code is correct, press button to disable the Lock feature. Pressing button cancels the action.

## SCREEN

## NOTES

**Disable Lock Code**  
**R R R R**  
**Enter Current Code**  
**ESC:Exit ENTER:Clear**

If Lock Code is correct Screen

**Disable Lock Code**  
**E E E E**  
**Enter Current Code**  
**Incorrect Lock Code**

If Lock Code is incorrect Screen


If you forget your lock code and can't access your pager, contact your company's pager administrator to get it remotely reset.

## Set Do Not Disturb

When the Do Not Disturb feature is enabled, the pager will not alert if a message is received between the set times. If a message is received during the set times, the pager can be set to alert at the end of the set time.


### SCREEN

### NOTES

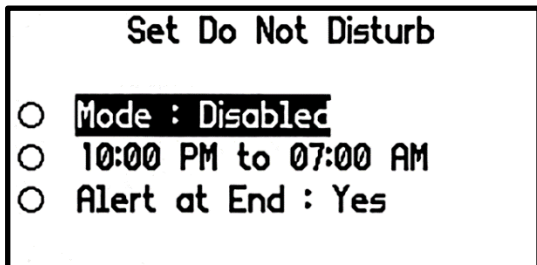


#### Set Do Not Disturb Menu Screen

- During the set do not disturb period, the pager will not alert (silent) if it receives a new message.
- Typically, the time value is set during a user's normal sleep time

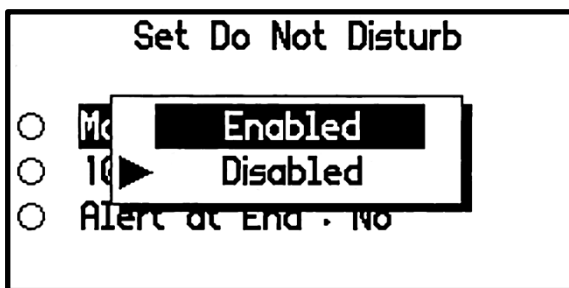

#### Mode Popup

- Select Enabled to enable the feature or set Disabled to disable the feature.

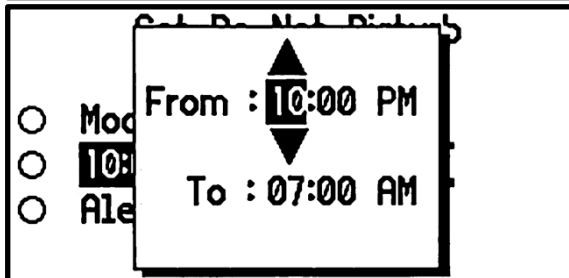


#### Time Setting Popup

Set the do not disturb start and end times in the same way that the Time & Date and Alarm Time settings were made.

#### **Note**

- The upper time is the function start time.
- The lower time is the function end time.

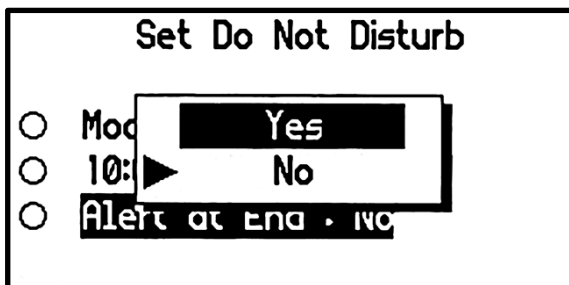


#### Alert at End Setting Popup

- Select Yes if the pager should alert at the end of the do not disturb period if a message was received
- Select No if the pager should not alert at the end of the do not disturb period if a message was received

## Key Vibe

When Key Vibe is On, there is a very short vibration each time a key is pressed. (Haptic feedback)

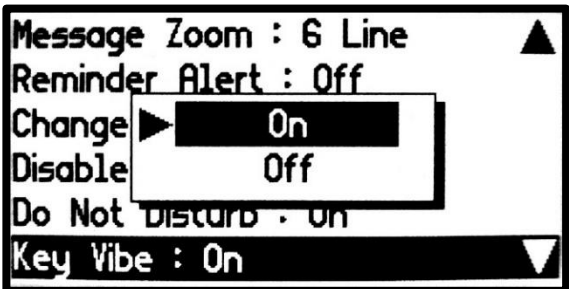






SCREEN	NOTES
	<ul style="list-style-type: none"> <li>Pressing any key causes the pager to vibrate very briefly.</li> <li>The vibration can help to confirm that the key has been pressed.</li> </ul>

## Inbox Size

The Inbox Size setting determines how many messages can be stored in the Inbox before messages are deleted as new messages are received. The allowable range is 10 – 99 messages. Once the Inbox is full of messages, messages will be automatically deleted as new messages arrive according to the following priority.

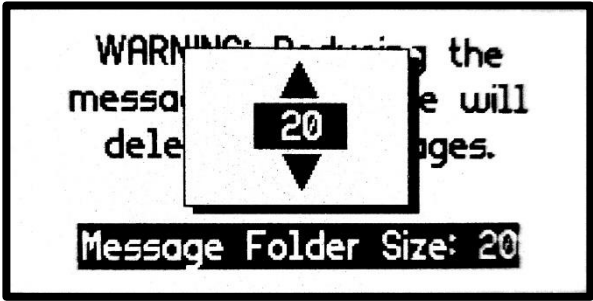1. Read messages starting with the oldest
2. Unread messages starting with the oldest

Locked messages are not automatically deleted.

SCREEN	NOTES
	<p><u>Inbox size warning.</u></p> <ul style="list-style-type: none"> <li>If the inbox size is set smaller than the currently set number, all messages will be deleted.</li> <li>Press the  key to start changing the Inbox message limit.</li> </ul>
	<p><u>Changing number of messages.</u></p> <ul style="list-style-type: none"> <li>Press the  or  button to change the number of messages.</li> <li>Press the  button to set the changed number of messages.</li> <li>Press the  button to cancel the and exit back to the Settings menu Screen.</li> </ul>

The Inbox Size value also controls how many messages can be stored in a Groups sub-folder. The Groups folder has a capacity of 99 messages across all the subfolders that may be programmed into the pager.

Thus, if the Inbox Size is set to 20 and there are three sub-folders, each sub-folder will contain a maximum of 20 messages. However, if the Inbox Size is set to 40 and there are three sub-folders, each sub-folder would not be able to contain 40 messages ( $3 \times 40 > 99$ ) and messages would be automatically deleted to maintain the Groups folder 99 message limit. Therefore, when a new message is received, message deletion will follow the following rules.

- IF FolderCount = Max
  - Delete oldest read message from the folder. If no read messages exist, delete oldest unread message from the folder
  - Store new message
- ELSEIF TotalCount = 99
  - Delete oldest read message from all Groups folders. If no read messages exist, delete total oldest unread message from all Groups folders.
  - Store new message

## About

### SCREEN

```
2021521 Ver.1.0.2
SN   : T00000000000
CAP1 : 6557102 <Personal>
CAP2 : 7154683 <ALL CALL>
```

### NOTES

#### About Screen

The About screen lists the following information:

- Date of firmware release
- Firmware version
- Device serial number
- Programmed device addresses with source text