

Alpha Elite



Contents

Introduction

Control Buttons.....	2
----------------------	---

Getting Started

Turning Your Pager On	3
-----------------------------	---

Turning Your Pager Off	4
------------------------------	---

Using the Function Menu	5
-------------------------------	---

Message-Status Screen	6
-----------------------------	---

Backlight.....	7
----------------	---

Receiving/Reading

Personal Messages	7
-------------------------	---

Display Zoom	9
--------------------	---

Time and Date

Setting the Time and Date.....	10
--------------------------------	----

Alerts

Setting the Incoming Message Alert	12
---	----

Locking/Unlocking Messages

Lock/Unlock a Message	14
-----------------------------	----

Deleting Messages

Delete a Single Message	15
-------------------------------	----

Delete all Messages.....	15
--------------------------	----

Pager Alarms

Set a One-Time Alarm	16
----------------------------	----

Set the Alarm to Alert Daily	17
------------------------------------	----

Message Alarms

Set a One-Time Message Alarm.....	19
-----------------------------------	----

Set a Daily Message Alarm.....	21
--------------------------------	----

Private Time

Set Private Time	22
------------------------	----

Maildrop/Information Service Option

Maildrop Alerts	24
-----------------------	----

Notebooks

Storing Personal and Maildrop

Messages in Your Notebooks	28
----------------------------------	----

Deleting Messages from

Your Notebooks	
----------------------	--

Features	30
----------------	----

Care and Use.....	32
-------------------	----

Battery Information.....	33
--------------------------	----

Installing/Replacing the Battery.....	33
---------------------------------------	----

Congratulations on purchasing an Alpha Elite pager. Your new pager provides exciting capabilities in messaging and can become a vital part of your business and personal life. The pager's four-line display and expanded functionality incorporates many of the most advanced electronic, communications and wireless technologies available.

The Alpha Elite pager uses FLEX[®] technology. FLEX technology extends battery life up to four times longer than ordinary pagers and improves the ability to receive messages.

These compact pagers integrate messaging and time keeping functions in a package that is convenient to carry. Full understanding of what this product offers begins with reading this user's guide. This user's guide includes a detachable quick reference card on the back cover.

Sending a Test Page to Yourself

After you have read this guide and your pager has been activated by your service provider, send yourself a test page. Refer to "Functionality and Use of Your Pager" on page 32 for more information.

Effective Use of Your Pager

Your pager can help you keep in contact with everyone important to you. By giving your pager number to your business associates, family, and friends, you can be contacted whenever needed.

If you have a cellular phone, give your pager number instead of your cellular number. Then you can decide who to call back on your cellular phone without paying for incoming calls.

Control Buttons




◀ ▶	Left/Right Directional Buttons	Used to navigate through the Function menu and through your messages.
●	Function/Select Button	Used to display the Function menu, to select a pager function, and to activate your selection.
—	Read/ Power On	Used to turn the pager on and to read messages.
▲ ▼	Up/Down Directional Buttons	Use to navigate through time, alarm, date setting functions and to navigate through messages.

Turning Your Pager On

Press **—**. A start-up screen is momentarily displayed and your pager activates the currently selected alert.

Note: Press any button to stop the alert.

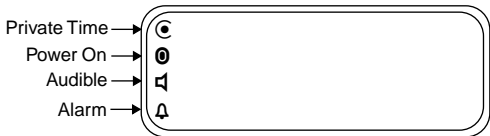

Example of the Standby Screen

When the pager is on and no activity is taking place, the Standby screen is displayed. The Standby screen displays the power-on indicator **⓪** and may display other pager status indicators.

Turning Your Pager Off

- ① Press ● to display the Function menu.
- ② Press ◀ to move the cursor to ☒.
- ③ Press ●. TURN PAGER OFF? is displayed.
- ④ Press ● again to turn the pager off.

Your pager is now off and the screen is blank.

Using the Function Menu

The Function menu provides access to the many features of your pager through the use of symbols and prompts.

- 1 Press **•** to display the Function menu. When the Function menu is initially displayed **⇄** flashes to indicate the location of the cursor.









Example of Fully Displayed Function Menu


- 2 Press **◀** or **▶** to move the cursor within the Function menu. As you move through the Function menu, the pager function symbols flash to indicate the present location of the cursor. To exit from the Function menu without making any changes press **—**.

Note: Some symbols may not display on your pager, depending upon your pager's features and whether it has messages.

Message-Status Screen

The Message-status screen shows the current status of your messages. For example, unread messages are indicated by a flashing  symbol, locked messages are indicated by .

The Message-status screen also displays the time and date and any activated pager settings. The Message-status screen can be accessed by pressing , , , or  from the Standby screen.

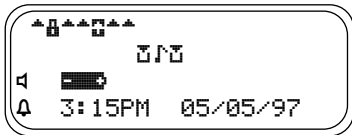

Example of the Message-Status Screen

Backlight

In low-light conditions, the pager's backlight automatically turns on whenever a button is pressed. You can manually turn the backlight on or off at any time by pressing and holding **●** for two seconds. The backlight automatically turns off when the pager returns to the Standby screen.

Receiving/Reading Personal Messages

Your pager can receive up to 19 personal messages. When a message is received, your pager alerts according to the current alert setting (audible, vibrate, or no message alert). A new message is indicated by a flashing **↓** symbol. When a message is selected the symbol changes to **⌵**.

Reading an Incoming Message

- 1 Press any button to stop the alert.
- 2 Press **—** to display your message.

A flashing **↓** in the right corner of the screen indicates the message is continued on an additional screen(s).

- 3 Press **—** to read the next screen.

Reading a Stored Message

- ① From the Message-status screen press ◀ or ▶ to move the cursor to the message you want to read.
- ② Press **■** to read the message.




Message Reading Features

- Press ▼ to read a message line by line.
- Press and hold **■** for automatic message scrolling, screen by screen.
- Press ▲ to go back to the first screen of the message.
- Press ◀ or ▶ while reading a message to read the previous or next message.

Note: When an unread message exists, your pager gives a periodic reminder alert until all unread messages are read, or for up to 30 minutes. A flashing ① on the Standby screen indicates that you have unread messages.

Message Preview

This feature allows you to scan the first line of your messages.




- ① Press .
- ② Use the  and  buttons to move the cursor through your messages.

Note: Previewing an unread message does not remove the unread message status from the message.

Display Zoom


When this feature is enabled, the standard 4-line display is converted to a 2-line display. The characters are enlarged vertically, increasing message readability.

To Enable Display Zoom:


- ① From the Function menu, press  to move the cursor to .
- ② Press . Display zoom is now active.

All new and stored messages including notebook messages are displayed in a 2-line format. Pager prompts are not enlarged in the zoom mode.


To Disable Display Zoom

- ① From the Function menu, press ◀ to move the cursor to .
- ② Press ●. Display zoom is now disabled.

Setting the Time and Date

- ① From the Function menu, press ◀ to move the cursor to .
- ② Press ● to display the Set-time-and-alarm screen.
- ③ Press ▶ to move the cursor to the hour digit.
- ④ Press ▲ or ▼ to adjust the hour.
- ⑤ Repeat steps 3 and 4 to adjust the minutes, AM/PM/24 hr., month, day, and year.

- 6 Press ● to activate the time and date setting.

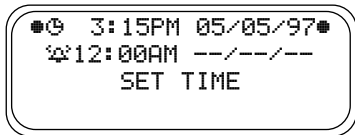

Example of Set-Time Screen

If you move the cursor past the last symbol in the row (far right), it automatically wraps around to the first symbol in the beginning of the same row (far left).




Note: To exit from any screen without making changes, press —.


Setting the Incoming Message Alert

You can set your pager's incoming message alert to an audible alert, a vibrating alert, a chirp (short beep) alert, a chirp alert with vibration, or no message alert (completely silent).




Note: Priority messages always have an audible alert.


Setting an Audible Alert


- 1 From the Function menu, press  to move the cursor to .
- 2 Press .

When  is displayed on the Standby screen, your pager is in the audible alert mode.


Setting the Alert Pattern



You can set your pager to alert audible with a standard alert (1), one of seven pleasing alerts (2-8), a chirp alert () , or a chirp and vibrate alert (). You can also select no message alert ().

Your pager must be in the audible alert mode ( displayed in the Standby screen) to select an alert pattern.

- 1 From the Function menu, press ◀ to move the cursor to .
- 2 Press ● to display the Choose alert menu.
- 3 Press ◀ or ▶ to move the cursor to the desired alert. The pager gives a sample of each alert as you move through the selections.
- 4 Press ● to activate your selection. The pager gives a sample of the alert to confirm your selection.



Setting a Silent (Vibrate) Alert

Note: If  is not displayed in the Standby screen, your pager is already in the silent alert mode.








- 1 From the Function menu, press ◀ to move the cursor to .
- 3 Press ● to activate the silent alert. The pager vibrates to confirm your selection. The  symbol is removed from the Standby screen.

Locking and Unlocking Messages

Up to 10 messages can be locked to prevent them from being deleted or from being replaced when memory is full.

When a message is locked, the  symbol is replaced by the  symbol indicating the message is locked.

To Lock or Unlock a Message


- 1 From the Message-status screen, press  or  to select the message you want to lock or unlock.
- 2 Press .
- 3 Press  to move the cursor to  to lock the message, or  to unlock the message.
- 4 Press .

To lock or unlock a message while reading it, follow steps 2 through 4 above while the message is displayed.

Deleting Messages

This feature allows you to delete unlocked and un-alarmed messages.


To Delete a Single Message

- 1 From the Message-status screen, press ◀ or ▶ to select the message you want to delete.
- 2 Press ●.
- 3 Press ▶ to move the cursor to .
- 4 Press ●. DELETE MESSAGE? is displayed.
- 5 Press ● again to delete the message.

To Delete a Message while Reading It

Follow steps 2 through 5 above while the message is displayed.

To Delete All Unlocked, Un-alarmed and Read Messages

- 1 From the Function menu, press ▶ to move the cursor to .
- 2 Press ●. DELETE ALL MESSAGES? is displayed.
- 3 Press ●. All unlocked, un-alarmed and read messages are deleted.





Note: Notebook messages are not deleted with this feature.


Pager Alarm

Your pager has an alarm that can be set for a specific time and date, or a specific time on a daily basis.



At the selected alarm time, your pager alerts. If the alarm times passes without being acknowledged,  flashes until any button is pressed.



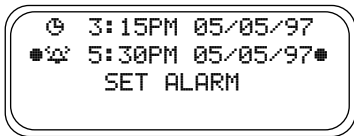






To Set a One-Time Alarm

- ① From the Function menu, press  to move the cursor to .
- ② Press . The Set-time-and-alarm screen is displayed.
- ③ Press . The Set-alarm screen is displayed.



Example of Set-Alarm Screen for a Specific Time and Date


The alarm symbol shows the current alarm status.  is displayed if the alarm is enabled,  is displayed if the alarm is disabled.

- 4 Press  to move the cursor to the alarm symbol.
- 5 Press  or  until  is displayed.
- 6 Press  to move the cursor to the hour digits.
- 7 Press  or  to adjust the hour digits.
- 8 Repeat steps 6 and 7 to adjust the minutes, AM/PM/24 hr., and date.
- 9 Press  to activate your selection. The  symbol is displayed on the Standby screen.

Note: To exit from any screen without making changes, press .

To Set the Alarm to Alert Daily

- 1 Follow steps 1 through 8 in “To Set a One-Time Alarm” to set the alarm time.
- 2 When setting the date in step 8, press ▼ until you see double dashes for the month, day, and year (--/--/--).

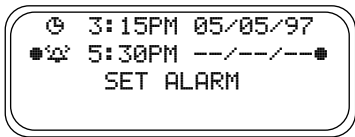






Example of Set-Alarm Screen for a Daily Alert






- 3 Press ● to activate your selection. The alarm is now set to alert every day at the specified time and 🔔 is displayed on the Standby screen.

Note: To exit from any screen without making changes, press —.


Message Alarms

This feature allows you to set a one-time or daily alarm for a selected personal message. You can set an alarm for up to five personal messages. When a message alarm is set,  replaces  in the Message-status screen. At the time the alarm sounds,  is again displayed unless the alarm is set to alert daily. Press  to display the message for which the alarm is set. If the alarm times passes without being acknowledged,  flashes until the message is read.



To Set a One-time Message Alarm


- 1 From the Message-status screen, press  or  to select the message you want to alarm.
- 2 Press .
- 3 Press  to move the cursor to .

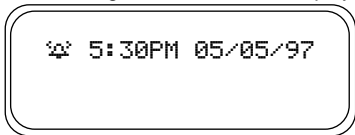- 4 Press ●. The Set-message-alarm screen is displayed.



Example of Set-Message-Alarm Screen

The alarm symbol shows the current alarm status.  is displayed if the message alarm is enabled,  is displayed if the message alarm is disabled.

- 5 Press ▲ or ▼ until  is displayed.
- 6 Press ► to move the cursor to the hour digits.

- 7 Press ▲ or ▼ to adjust the hour digits.
- 8 Repeat steps 6 and 7 to adjust the minutes, AM/PM/24 hr., and date.
- 9 Press ● to activate your selection.

You can also set a message alarm while reading the message by following steps 2 through 9 above.

To Set a Daily Message Alarm

- 1 Follow steps 1 through 8 to set the message alarm time.
- 2 When setting the date in step 8, press ▼ until you see double dashes for the month, day, and year (--/--/--).
- 3 Press ● to activate your selection. The alarm is now set to alert every day at this specified time.

Note: To exit from any screen without making changes, press ■.


Private Time

You can select a time period during which your pager is completely silent. Your pager still receives messages but it does not alert. The pager alerts only if an alarm expires or a priority message is received.







To Set Private Time

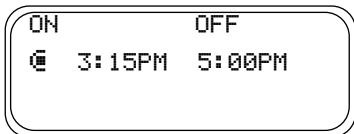
- 1 From the Function menu, press ◀ to move the cursor to ☐.
- 2 Press ●.

When the Private-time screen is first displayed, the cursor is at the flashing symbol on the far left, ☐ indicates private time is enabled, ■ indicates private time is disabled.










Example of Set Private-Time Screen

- 3 Press and release  until  is displayed.
- 4 Press  to move the cursor to the hour digit.
- 5 Press  or  to adjust the hour digit.
- 6 Repeat steps 4 and 5 to adjust the on and off time setting .
- 7 Press  to activate your selection.

The symbol  is displayed in the Standby screen when private time is enabled.

Note: If the on time is equal to the off time, private time is not enabled.


To Disable Private Time

- 1 Press .
- 2 Press  to move the cursor to .
- 3 Press .
- 4 Press and release  until  is displayed.
- 5 Press  to disable private time.

Note: To exit from any screen without making changes, press .

Maildrop/Information Service Option

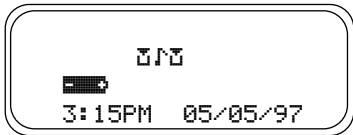

Your pager is capable of receiving maildrop messages, also known as information services. Maildrop messages are received and read the same way as personal messages and the icon indicators are located on the second row of the display.



Example of Maildrop Indicators

Maildrop Alerts

When this option is enabled, you can set your pager to alert when maildrop messages are received.

- A  in the maildrop message area indicates the alert is *off* for that maildrop. A  indicates the alert is *on* for that maildrop.

- If the pager's incoming message alert is set to silent (vibrate), all maildrops with the alert set to on (🔔), produce a 2-second vibration when a maildrop message is received.
- If the pager's incoming message alert is set to audible, the maildrop alert can be set to either the standard alert, one of the seven pleasing alerts, a chirp alert, a chirp and silent alert, or no message alert via the Choose-alert menu. The length of the maildrop alert is 2 seconds.
- If the pager's incoming message alert is set to no message alert, maildrop alerts cannot be set and all maildrop symbols are automatically displayed as 📧.

Turning Individual Maildrop Alerts On and Off


- ➊ From the Message-status screen, press ◀, ▶, or ▼ to move the cursor to the desired maildrop.
- ➋ Press ●.
- ➌ Press ▶ to move the cursor to 🔔 alert on or 📧 alert off.
- ➍ Press ● to turn the maildrop alert on or off.

Selecting a Maildrop Alert

- ➊ From the Message-status screen, press ◀, ▶, or ▼ to move the cursor to the desired maildrop.
- ➋ Press ●.
- ➌ Press ▶ to move the cursor to ⏏.
- ➍ Press ●. The choose alerts menu is displayed.
- ➎ Press ◀ or ▶ to move the cursor to the desired alert.
- ➏ Press ● to activate the alert. The pager gives a sample of the alert, unless no message alert is selected.

Notebooks

Your pager has two notebook areas, a personal notebook for storing personal messages, and a maildrop notebook for storing information service messages. Notebook messages are indicated by ☒. Personal messages are indicated on the first row of the display. Maildrop messages are indicated on the second row of the display.

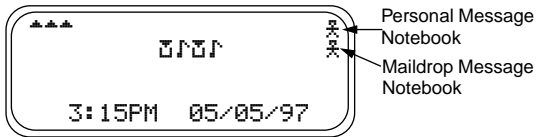

Example of Notebook Locations


Storing Personal and Maildrop Messages in Your Notebooks

- ① From the Message-status screen, press ▲, ▼, ◀, or ▶ to move the cursor to the personal or maildrop message you want to move into the notebook.
- ② Press ●.
- ③ Press ▶ to move the cursor to ☒.
- ④ Press ●. The message is now in the notebook.

Deleting Messages from Your Notebooks

- ① From the Message-status screen press ▲, ▼, ◀, or ▶ to move the cursor to the notebook from where you want to delete a message.
- ② Press — to display a list of the notebook messages.

- 3 Press ▲ or ▼ to scroll through the list until ●✖ is displayed at the beginning of the notebook message you want to delete.

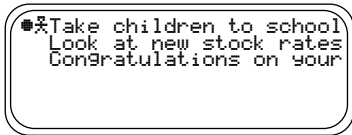

Example of Notebook Screen in Delete Mode

- 4 Press ● to display the Function menu.
- 5 Press ► to move the cursor to ✖.
- 6 Press ●. DELETE MESSAGE? is displayed.
- 7 Press ● to delete the message.
- 8 Repeat steps 3 through 7 for each message you want to delete.


Note: Notebook messages are deleted one at a time. If all messages are deleted from a notebook, the ✖ symbol is removed from the display.

Message Storage

Your pager can store up to 19 personal messages in memory.



Note: Stored messages differ from locked messages. They can be deleted or overwritten when memory is full and a new message comes in.

Automatic Message Deletion

If all 19 message slots are full and a new message is received, the oldest, unlocked, un-alarmed, and previously read message is automatically deleted when a new message is received. When the message memory is full,  is displayed.

Note: To prevent specific messages from being deleted, lock them. Then you can delete all other messages you no longer need to prevent the overflow condition.

Out of Range

If your pager has this feature, and if you are outside your paging coverage area,  is displayed. As long as  is displayed, your pager cannot receive messages.

Key Click

If this feature is enabled, and the pager is in the audible mode, a “click” is emitted when any of the pager’s buttons are pressed. The click is not emitted when the pager is in the silent mode.

Duplicate Message

If the same message is received more than once, DUPLICATE MESSAGE is displayed at the beginning of the new message. The new duplicate message replaces the older duplicate message and contains the latest time and date stamp.

Errored Data Indicator

The symbol ❏ is displayed if a potentially errored character is received. The indicator alternately flashes with a “best guess” of the errored character.

Alphanumeric and Long Numeric Missing Fragment Indicators

If part of a message has not been received <...> or _..._ is displayed in place of the missing characters.

Battery Gauge

A battery gauge indicator keeps you informed of the battery level. The indicators are listed on the card attached to the back cover.

Cleaning Your Pager

To clean smudges and grime from the exterior of your pager, use a soft, non-abrasive cloth moistened in a mild soap and water solution. Use a second cloth moistened in clean water to wipe the surface clean. Do not immerse in water. Do not use alcohol or other cleaning solutions.

Functionality and Use of Your Pager

For questions pertaining to the functions and use of your Unication pager, please visit our web site at www.uni.com/pagers .For questions pertaining to your paging service, contact your paging service provider.


Battery Information

Your pager is designed to operate with a single AA-size alkaline battery (carbon zinc batteries are not recommended). See the diagram on the following page for the battery door location.

Installing/Replacing the Battery

To install or replace the battery, hold the pager face down and proceed as follows:

- ❶ Unlock the battery door by sliding the door latch away from the battery door.
- ❷ Slide the battery door in the direction of the arrow (toward the outer edge).
- ❸ Lift the battery door away from the housing to remove it.
- ❹ Lift the battery out of the battery compartment, taking note of the positive (+) and negative (-) markings on the battery and the pager housing.

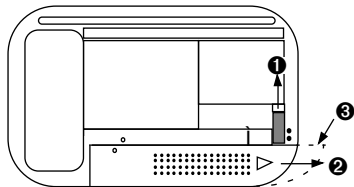

*Alpha Elite Pager
Battery Replacement (rear view)*

NOTES

Patent Information




This Unication product is manufactured under one or more Unication U.S. patents. These patent numbers are listed inside the housing of this product. Other U.S. patents for this product are pending.

Alpha Elite™ Quick Reference Card

Turning Your Pager On




Press .

Turning Your Pager Off



- 1 From the Function Menu, press  to move the cursor to .
- 2 Press  twice.

Function Menu








Provides access to the features described in this quick reference card and in your user's guide.

- 1 Press .
- 2 Press  or  to move within the Function menu.







Receiving/Reading Messages

- 1 Press any button to stop the alert.
- 2 Press  to display your message.
- 3 Press  to view the next screen.


Locking and Unlocking Messages

- 1 From the Message-status screen, press  or  to select the message you want to lock/unlock.
- 2 Press .
- 3 Press  to move the cursor to  lock or  unlock.
- 4 Press .


Deleting Messages


- 1 From the Message-status screen, press  or  to select the message you want to delete.
- 2 Press .
- 3 Press  to move the cursor to .
- 4 Press  twice.


Setting the Time and Date

- 1 From the Function menu, press ◀ to move the cursor to .
- 2 Press ●.
- 3 Press ▶ to move the cursor to the hour digit.
- 4 Press ▲ or ▼ to adjust the hour.
- 5 Repeat steps 3 and 4 to adjust the minutes, AM/PM/24 hr., month, day, and year.
- 6 Press ● to activate the setting.



Setting Alarms

- 1 From the Function menu, press ◀ to move the cursor to .
- 2 Press ●.
- 3 Press ▼.

- 4 Press ▶ to move the cursor to the alarm symbol.
- 5 Press ▲ or ▼ until  is displayed.
- 6 Follow steps 3 through 6 in *Time and Date* to set the alarm time.


To disable the alarm, in step 5 above, press ▲ or ▼ until  is displayed.

To set a message alarm:



- 1 With the message displayed, press ●.
- 2 Press ▶ to move the cursor to .
- 3 Press ▲ or ▼ until  is displayed.
- 4 Follow steps 3 through 6 in *Setting the Time and Date*.

Note: To set a daily pager or message alarm, press ▼ until double dashes are displayed for the month, day, and year (--/--/--).


Storing Messages in Your Notebooks

- 1 From the message-status screen, press ▲, ▼, ◀, or ▶ to move the cursor to the message you want to move into the notebook.
- 2 Press ●.
- 3 Press ▶ to move the cursor to .
- 4 Press ● to store the message.



Private Time On

- 1 From the Function menu, press ◀ to move the cursor to .
- 2 Press ●.
- 3 Press and release ▼ until  is displayed.

- 4 Follow steps 3 and 4 in *Setting the Time and Date* to set the on and off times.

- 5 Press ● to activate your selection. To turn private time off, in step 4 above, press and release ▼ until  is displayed.








To Enable/Disable Display Zoom

- 1 From the Function menu, press ◀ to move the cursor to  enable or  disable.
- 2 Press ●.















Pager Symbols

- 0 Power On
- 🔊 Audible Alert Mode on
- Ⓞ Private Time enabled
- 🔔 Alarm enabled

Message Status Symbols



















	Locked Message
	Maildrop Alert Enabled
	Maildrop Alert Disabled
	Personal Message
	Memory Full
	Alarmed Message
	Notebook

Function Menu Symbols

	Choose Alert
	Set Time and Alarm
	Set Private Time
	Display Zoom On
	Display Zoom Off
	Set Silent Alert
	Set Audible Alert
	Turn Pager Off
	Escape (to Message-status screen)
	Delete Message
	Delete All Messages
	Lock Message
	Unlock Message
	Turn Maildrop Alert On

	Turn Maildrop Alert Off
	Set Message Alarm
	Add to Notebook

Other Symbols

	Message Continuation
	24 Hour Time
	AM Time
	PM Time
	Enable Alarm
	Disable Alarm
	Private Time Enabled
	Private Time Disabled
	Low Battery Indicator
	1/4 Battery Indicator
	1/2 Battery Indicator
	3/4 Battery Indicator
	Full Battery Indicator
	Out of Range
	Truncated Message
	Errored Data Indicator
	Alphanumeric Missing Fragment Indicator
	Long Numeric Missing Fragment Indicator